


Ready To Go
SimpleSpec 600.17™

Installation Manual

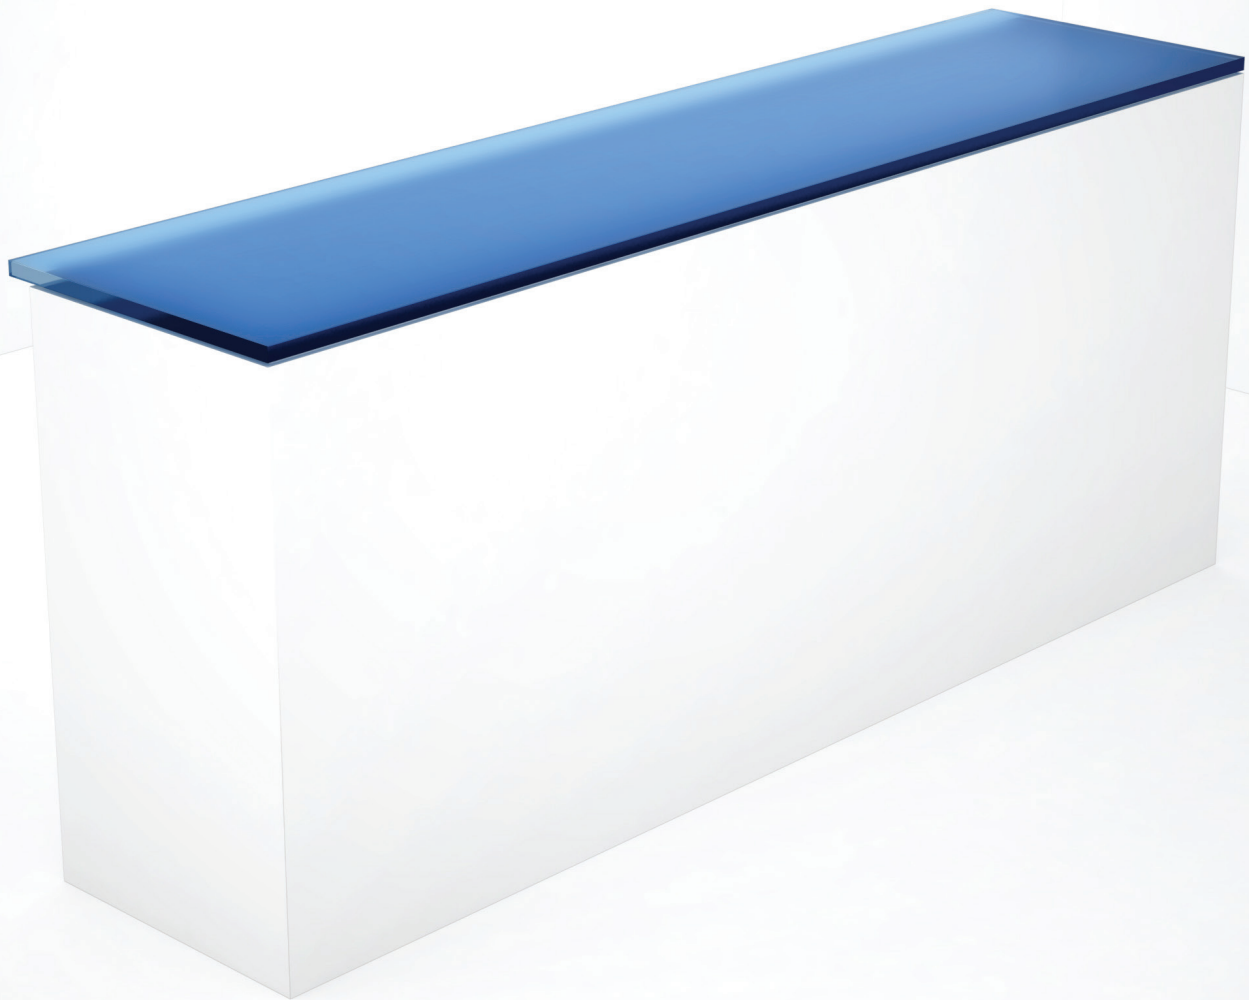


For more information, please visit 3-form.com or call 800.726.0126

JUNE 2020 | MAN-RTG-600-17 | REV 003 © 2020 3form, Inc. All rights reserved.


Contents Overview

(×1)




96W Dimmable
Power Supply
3-60-765

(×1)

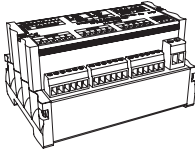


9 Channel PWM
DMX Interface
3-60-001

(×1)




Light Drive RGB -
DMX Wall Control
3-60-510

(×1)

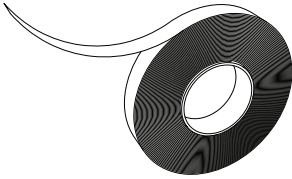


3M VHB WHITE Tape
3-20-313

(×1)





100' Patch Cable
3-60-002

Required Tools



Clear Silicone

Overview

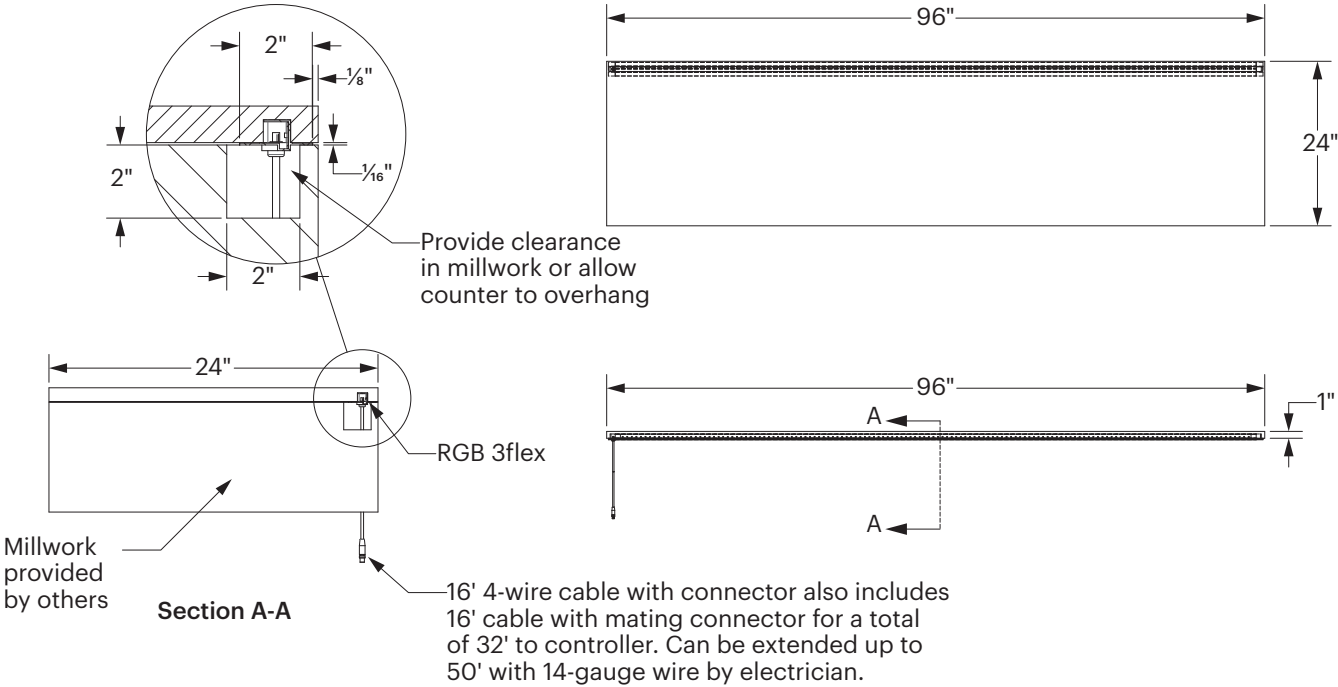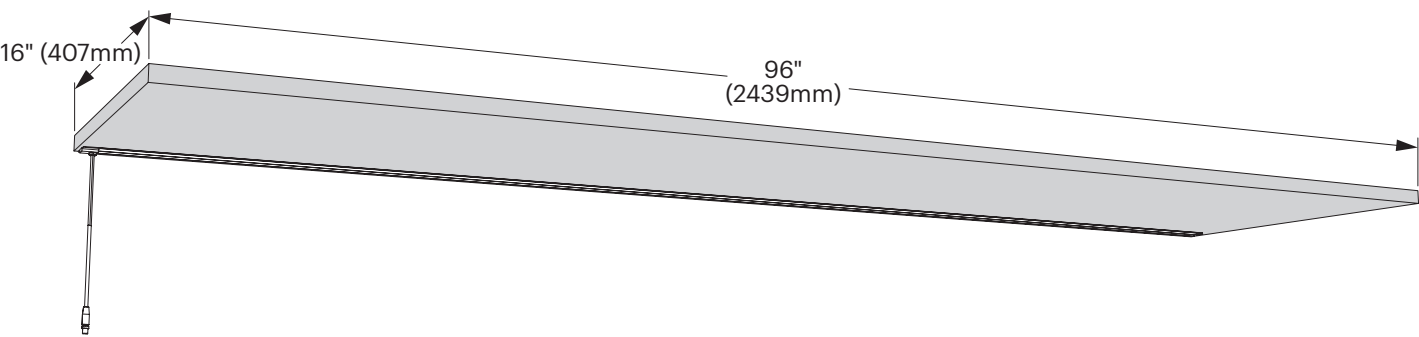


Installation

1 Preparation


Make sure Chroma and millwork are free from dirt and debris.

2 Apply Adhesives

- a** Apply 1"× 1" Piece of VHB tape in six (6) places on millwork .

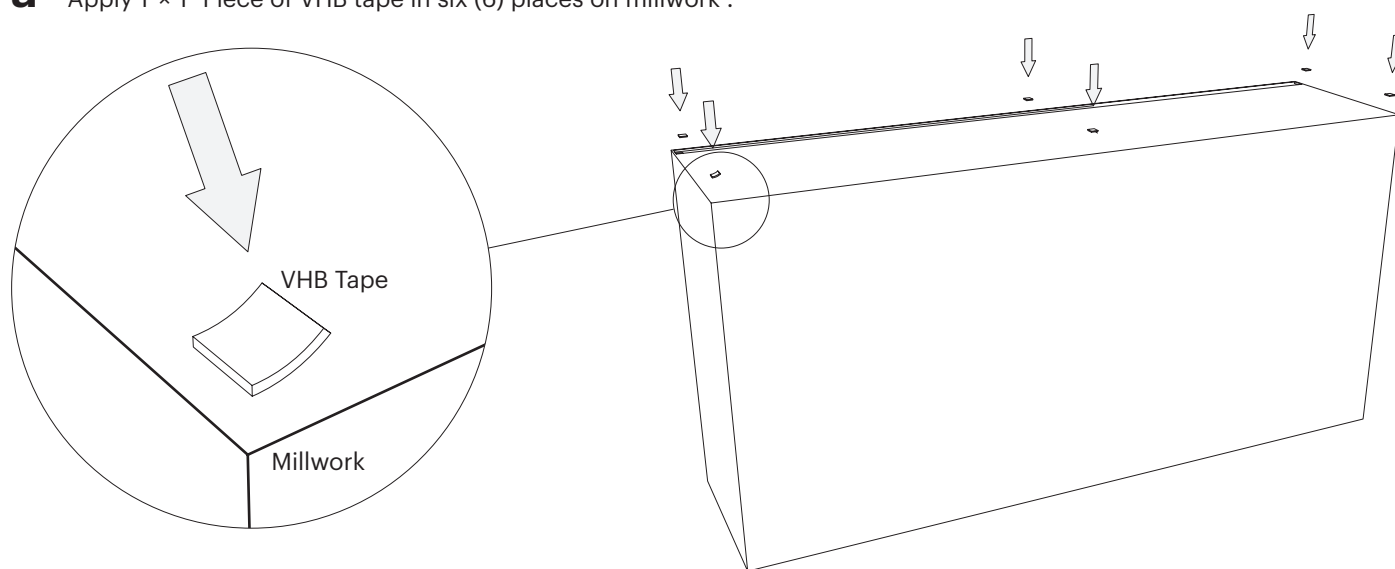


- b** Apply quarter sized dab of clear silicone in six (6) places.

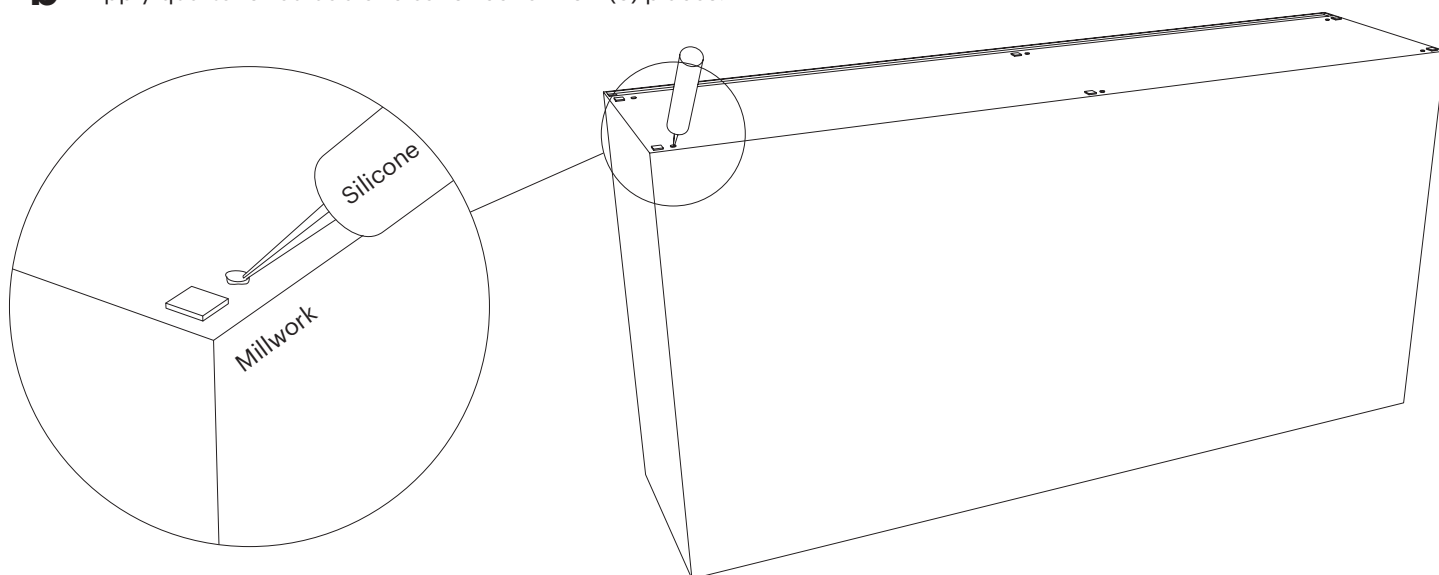

Installation

3 Place Panel

Make sure all tape sticks properly until silicone dries. Tape or clamp as needed to achieve good adhesion.

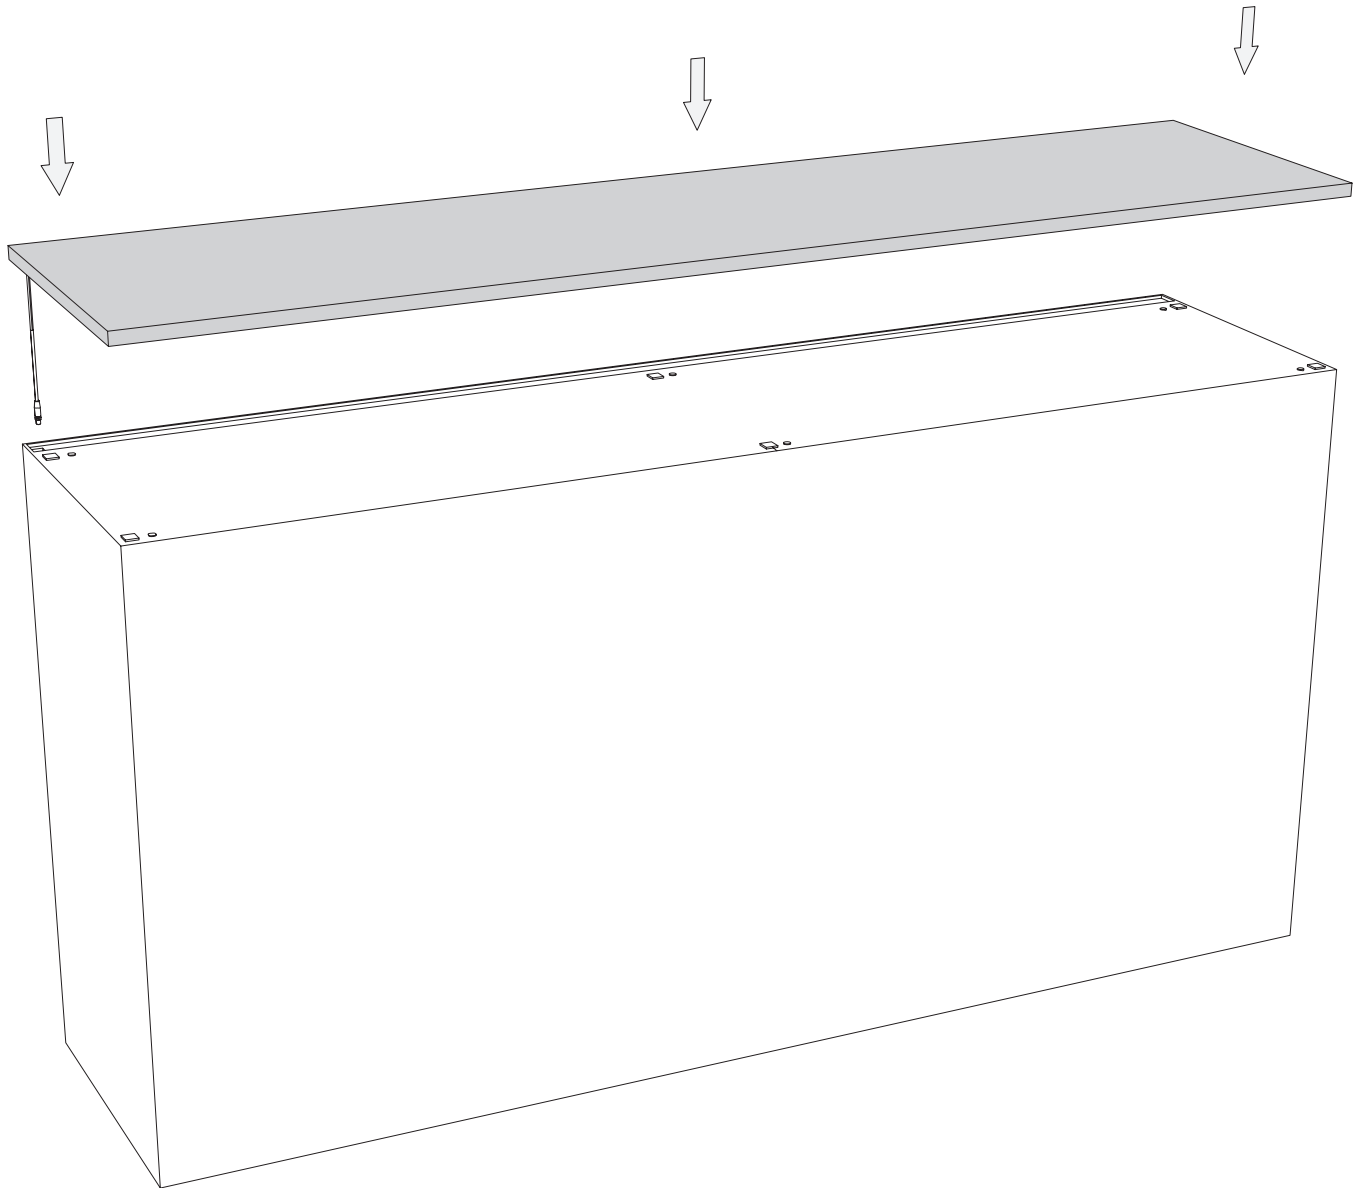

Installation

4 Connect Electrical

Have a qualified electrician connect the wiring and test lighting.

