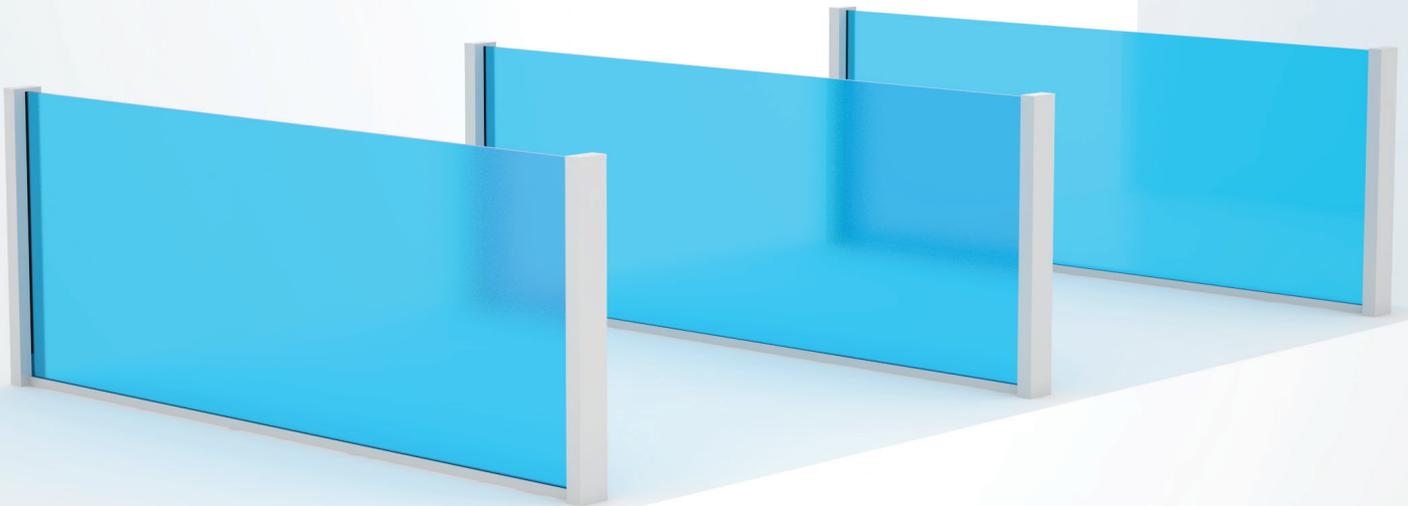













Ready To Go  
**200.55-Privacy Screen™**

**Installation Manual**





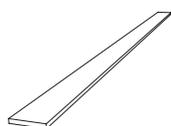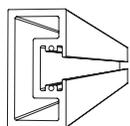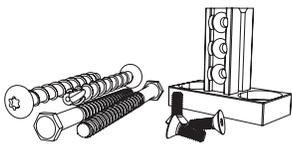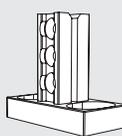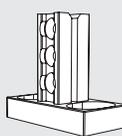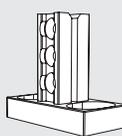For more information, please visit [3-form.com](http://3-form.com) or call 800.726.0126  
DECEMBER 2019 | MAN-RTG-200-55 | REV 002 © 2019 3form, Inc. All rights reserved.


**Contents Overview**

<p>(x3)   <b>1/4" Varia Panel</b></p>	<p>(x1)   <b>Privacy Screen Installation Template - Spacer</b>          3-15-2155</p>	<p>(x1)   <b>Hammer Drill Bit, 1/8" Concrete Bit</b>          3-15-2336</p>	<p>(x6)   <b>Privacy Screen Top Cap</b>          3-15-2134</p>				
<p>(x6)   <b>Privacy Screen End Post</b>          0-15-2135</p>	<p>(x3)   <b>Privacy Screen U Channel, 47"</b>          0-15-2156</p>	<p>(x6)   <b>Privacy Screen Glazing Channel, 21½"</b>          0-15-2139</p>	<p>(x3)   <b>Privacy Screen U Channel Glazing</b>          3-15-2194</p>				
<p>(x6)  =</p> <table border="0" style="width: 100%;"> <tr> <td data-bbox="552 1071 698 1444"> <p>(x6)   <b>Privacy Screen Base Plate</b>          3-15-2133</p> </td> <td data-bbox="714 1071 958 1444"> <p>+</p> <p>(x18)   <b>Privacy Screen 8/32 x 1/2" Countersunk Screw</b>          3-15-2143</p> </td> <td data-bbox="974 1071 1201 1444"> <p>+</p> <p>(x12)   <b>1/4 x 3" Hex Head Wood Lag Screw</b>          3-15-2199</p> </td> <td data-bbox="1218 1071 1477 1444"> <p>+</p> <p>(x12)   <b>1/4 x 2-5/8" Concrete Screw</b>          3-15-2144</p> </td> </tr> </table>				<p>(x6)   <b>Privacy Screen Base Plate</b>          3-15-2133</p>	<p>+</p> <p>(x18)   <b>Privacy Screen 8/32 x 1/2" Countersunk Screw</b>          3-15-2143</p>	<p>+</p> <p>(x12)   <b>1/4 x 3" Hex Head Wood Lag Screw</b>          3-15-2199</p>	<p>+</p> <p>(x12)   <b>1/4 x 2-5/8" Concrete Screw</b>          3-15-2144</p>
<p>(x6)   <b>Privacy Screen Base Plate</b>          3-15-2133</p>	<p>+</p> <p>(x18)   <b>Privacy Screen 8/32 x 1/2" Countersunk Screw</b>          3-15-2143</p>	<p>+</p> <p>(x12)   <b>1/4 x 3" Hex Head Wood Lag Screw</b>          3-15-2199</p>	<p>+</p> <p>(x12)   <b>1/4 x 2-5/8" Concrete Screw</b>          3-15-2144</p>				

**Required Tools**
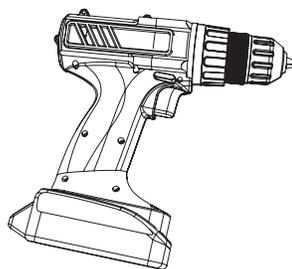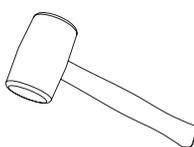
<p>  <b>Drill</b></p>	<p>  <b>Allen Wrenches</b></p>	<p>  <b>Hammer Drill</b></p>
---	---	---


### Overview

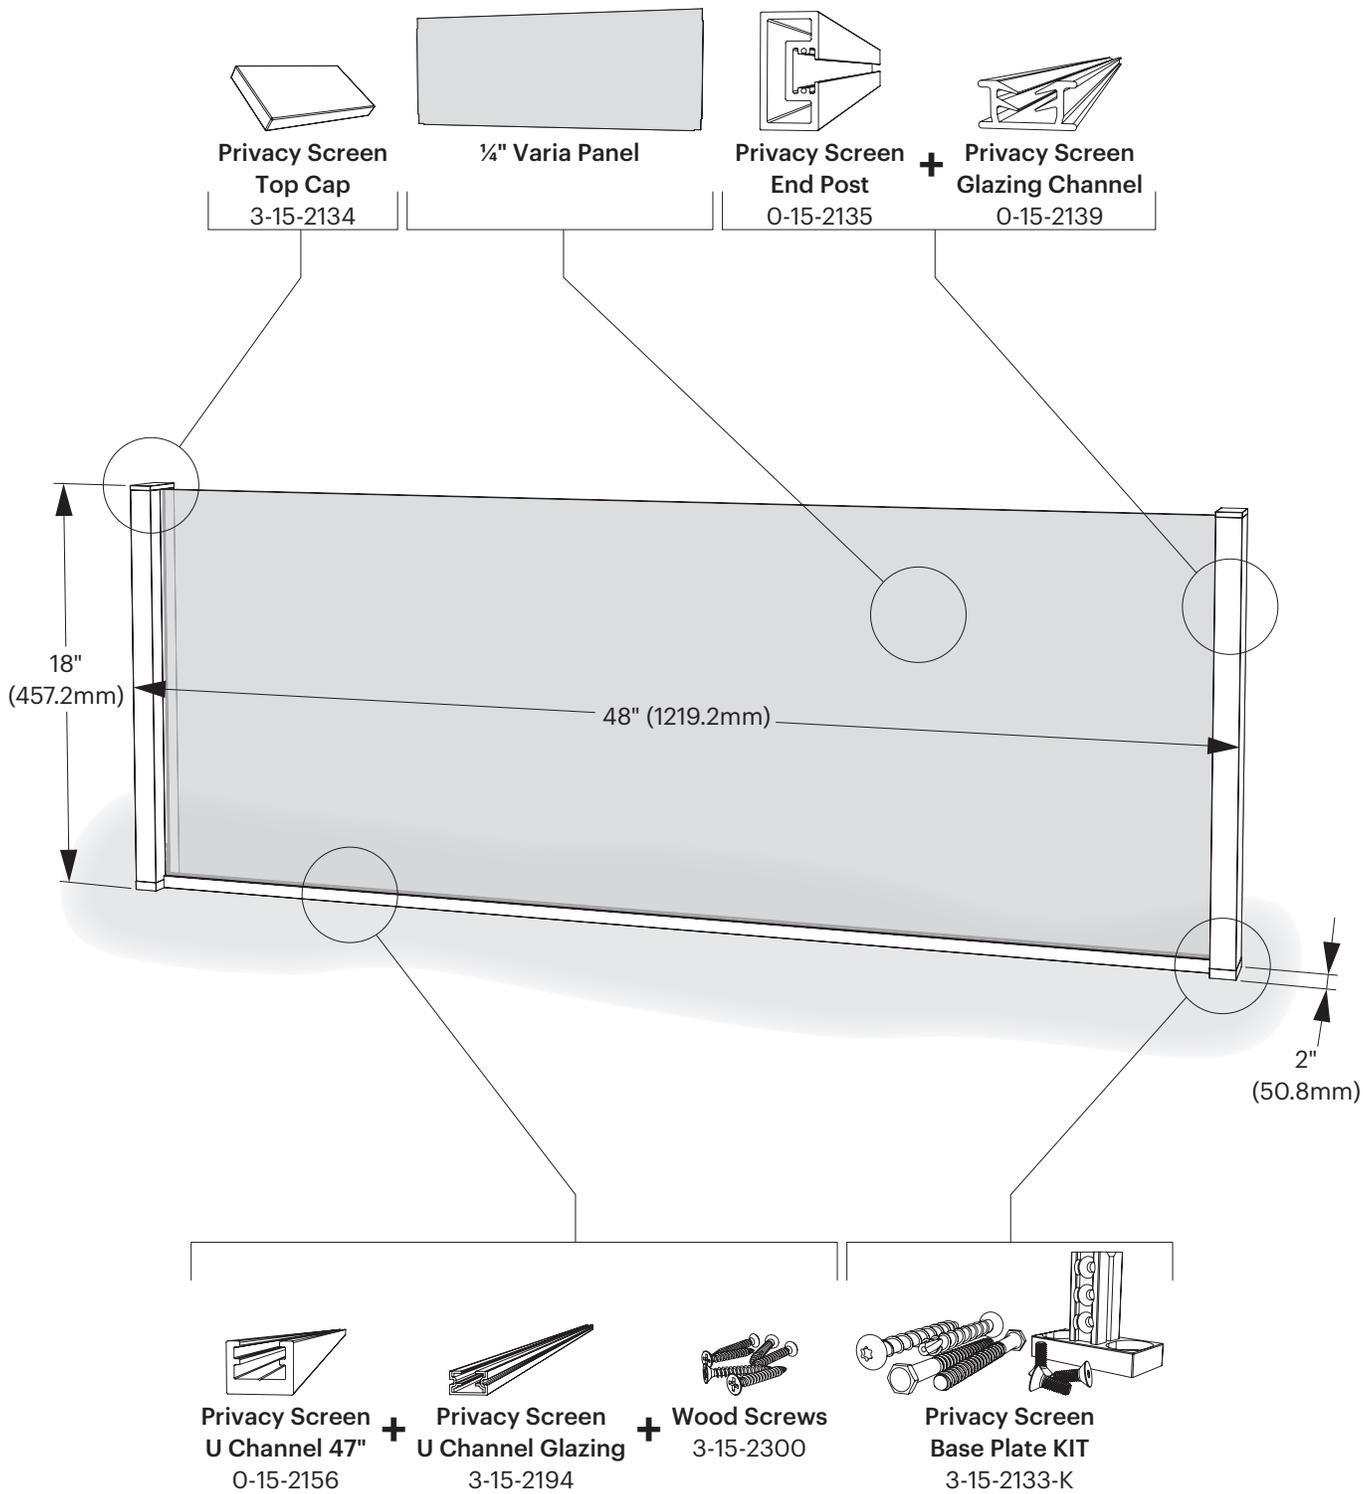

### Installation

#### 1 Drill Pilot Holes

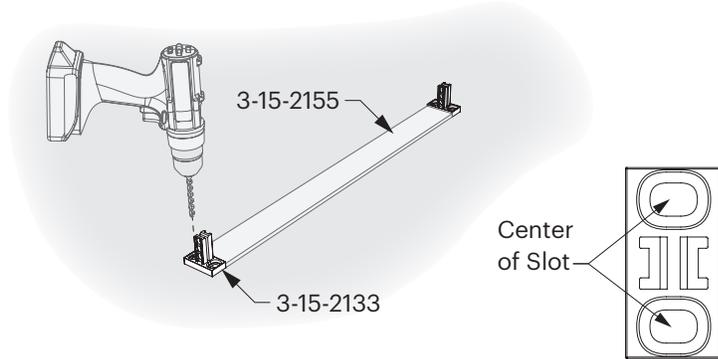Using the Privacy Screen Installation Template provided, layout the intended configuration of the privacy partition. Use the base plates (3-15-2133) with spacer piece (3-15-2155) to lay out the entire configuration. Drill Pilot hole in the center of the slot on the base plates (3-15-2133).




Substrate	Diameter	Drill Bit *	Depth	Anchors
Wood	5/32"	3-15-2336	min 3/4"	3-15-2199
Concrete	1/4"		min 3"	3-15-2144

\*3form stocks the drill bits required for the pilot holes. If you wish to purchase a drill bit, please contact your 3form sales representative.

#### 2 Install Baseplate

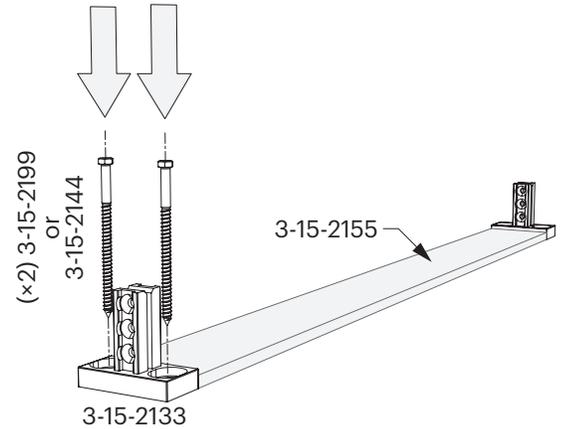Before fastening ensure the side with countersunk holes lines up with the slot of the End Post.



#### 3 Attach Bottom U Channel

**a** Cut U Channel Glazing (3-15-2194) to length of U Channel.



**b** Lineup U Channel Glazing over U Channel and drill 5/16" diameter holes in the U Channel Glazing where the countersunk holes of the U Channel are.



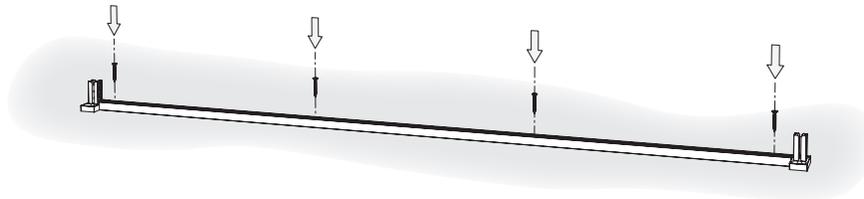
**c** U Channel Glazing Channel (3-15-2194) for flush mount U Channel will have holes for countersunk screw access.



## Installation

### 3 Attach Bottom U Channel *cont...*

**d** Center U channel between Base Plates.





### 4 Attach All Vertical Posts




### 5 Cut Glazing Channels (if necessary)

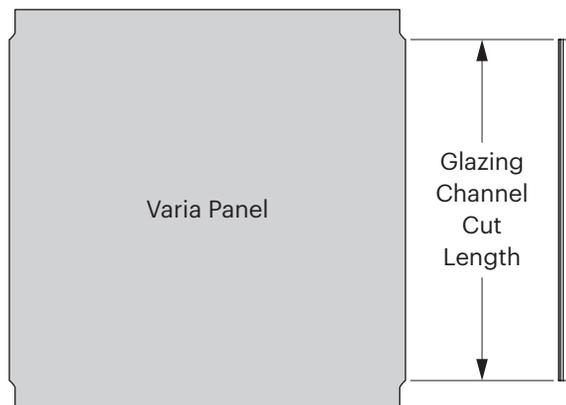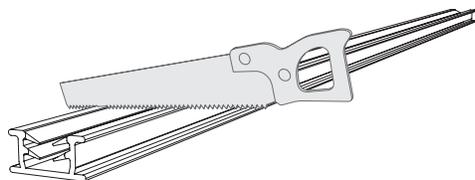Cut Glazing Channels (0-15-2139) down to the correct length. Correct Length is determined by length of straight on panel.



### Installation
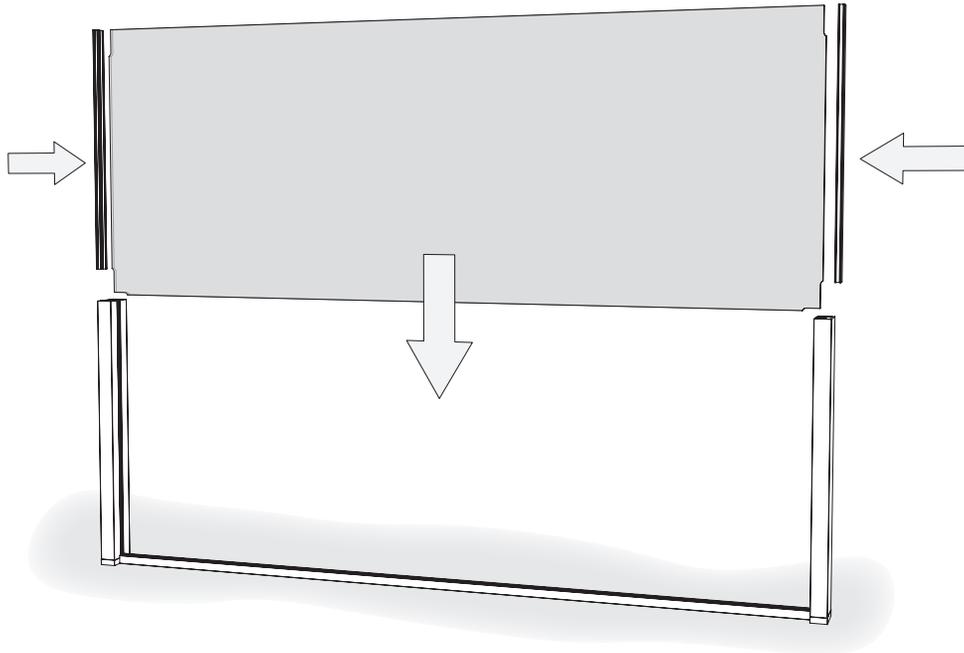
#### 6 Install Glazing Channels and Panels



#### 7 Install Top Caps

