

Ready To Go

SimpleSpec 100.01™











Installation Manual



For more information, please visit 3-form.com or call 800.726.0126


JUNE 2018 | MAN-RTG-100-01 | REV 001 © 2018 3form, Inc. All rights reserved.

Contents Overview

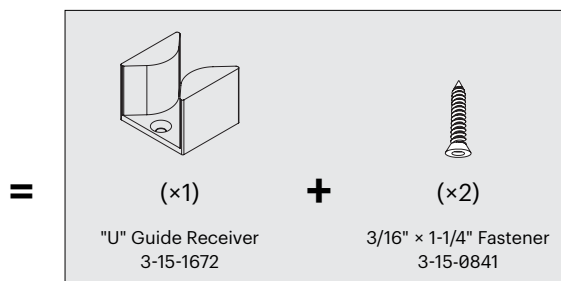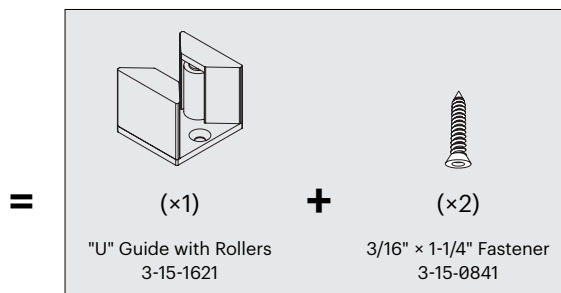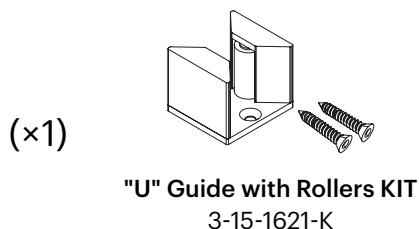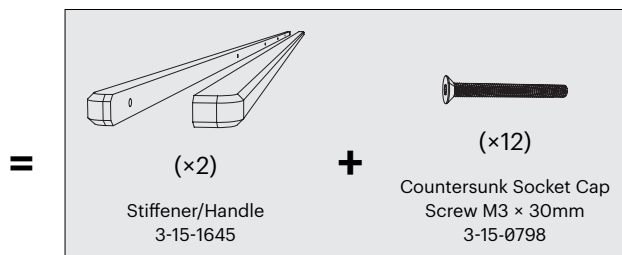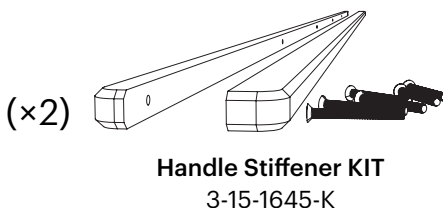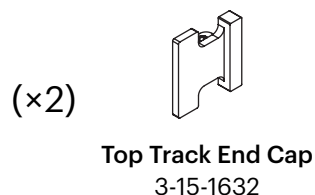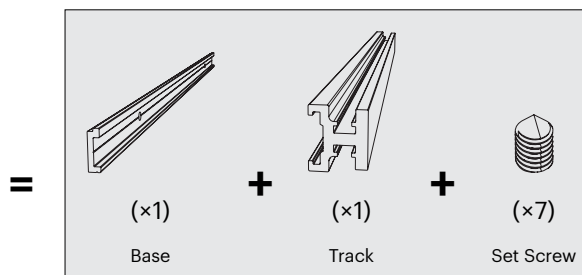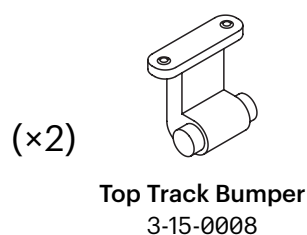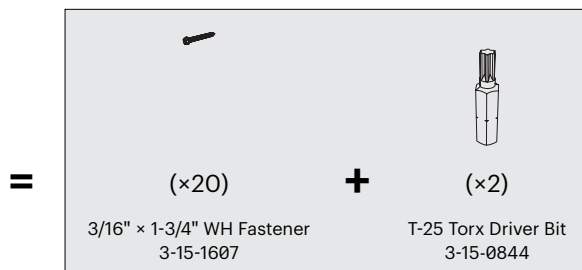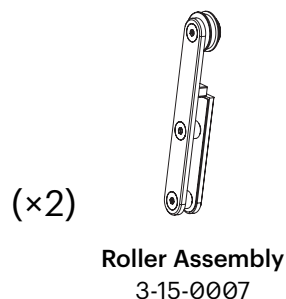

Overview


The 100.01 solution from 3form is a wall-mounted sliding panel assembly. Installation is easy and the resulting appearance is cleanly defined while retaining a minimalist approach to ensure the hardware complements the material.

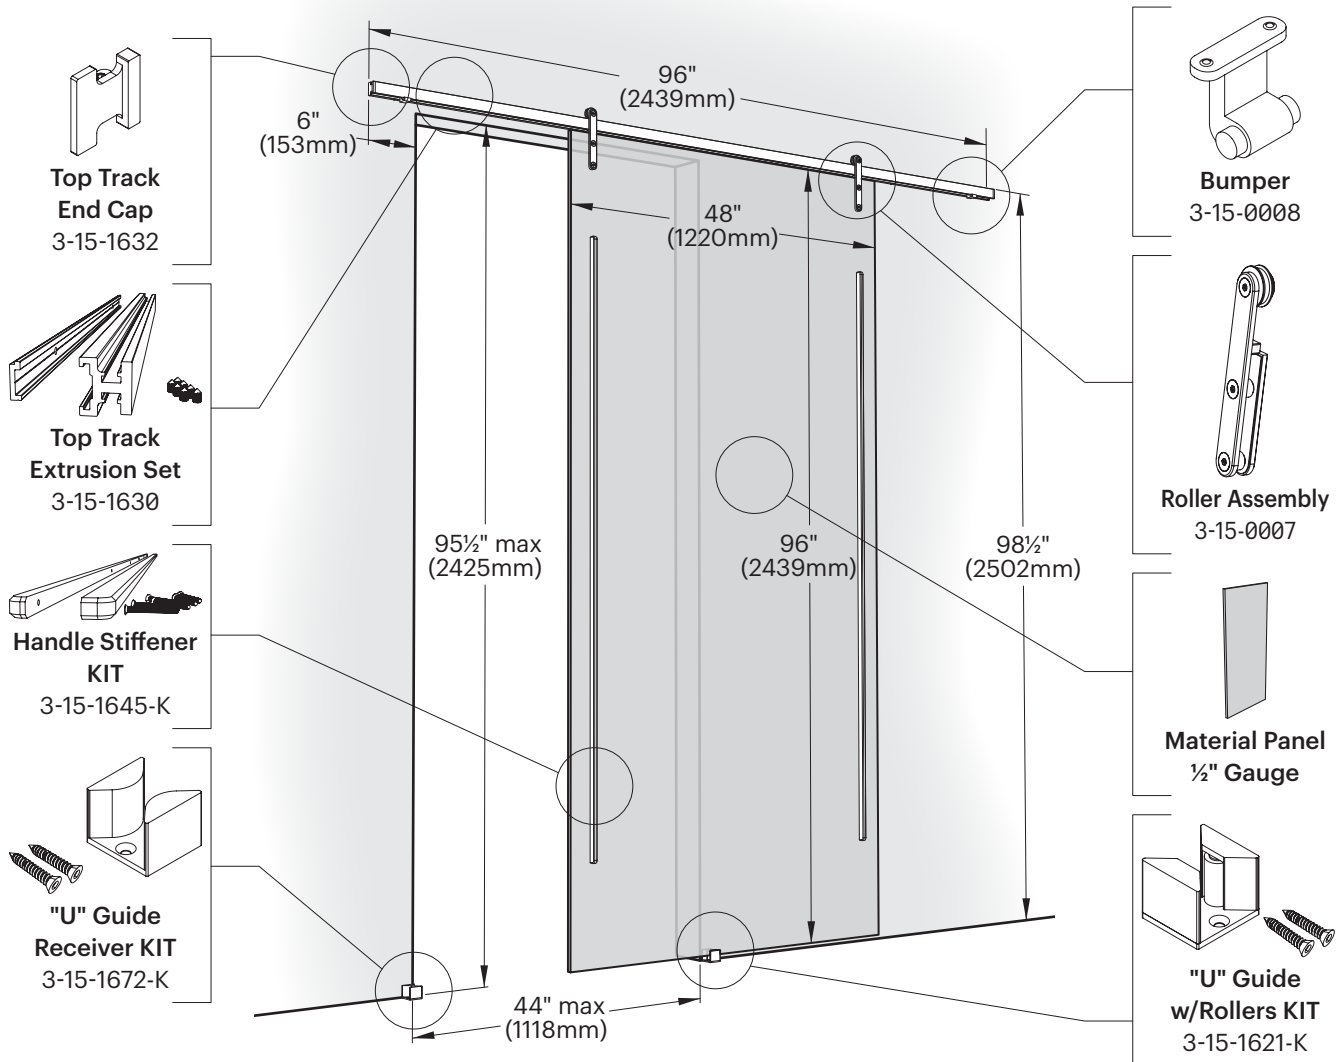

**Shown in maximum size with a standard 4' x 8' panel*


Pre-Installation

Required Tools

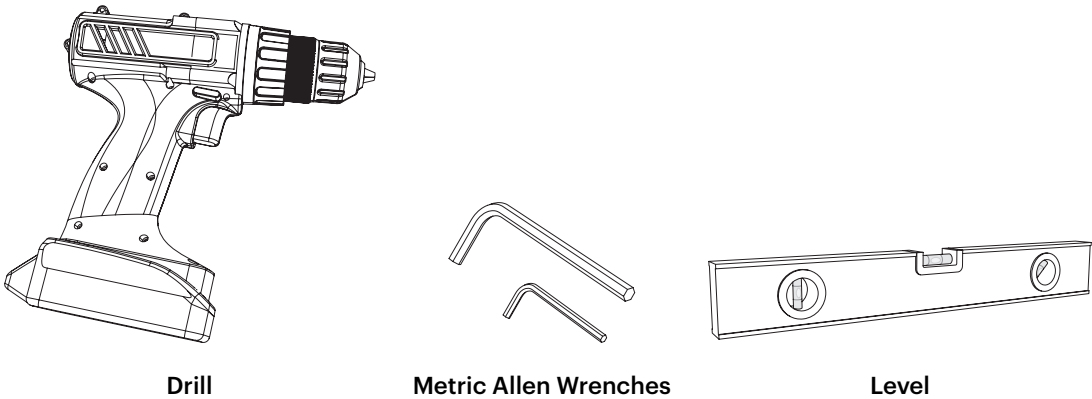

Dimensions


Prior to installation consider the following to ensure the door will be compatible with the intended location.

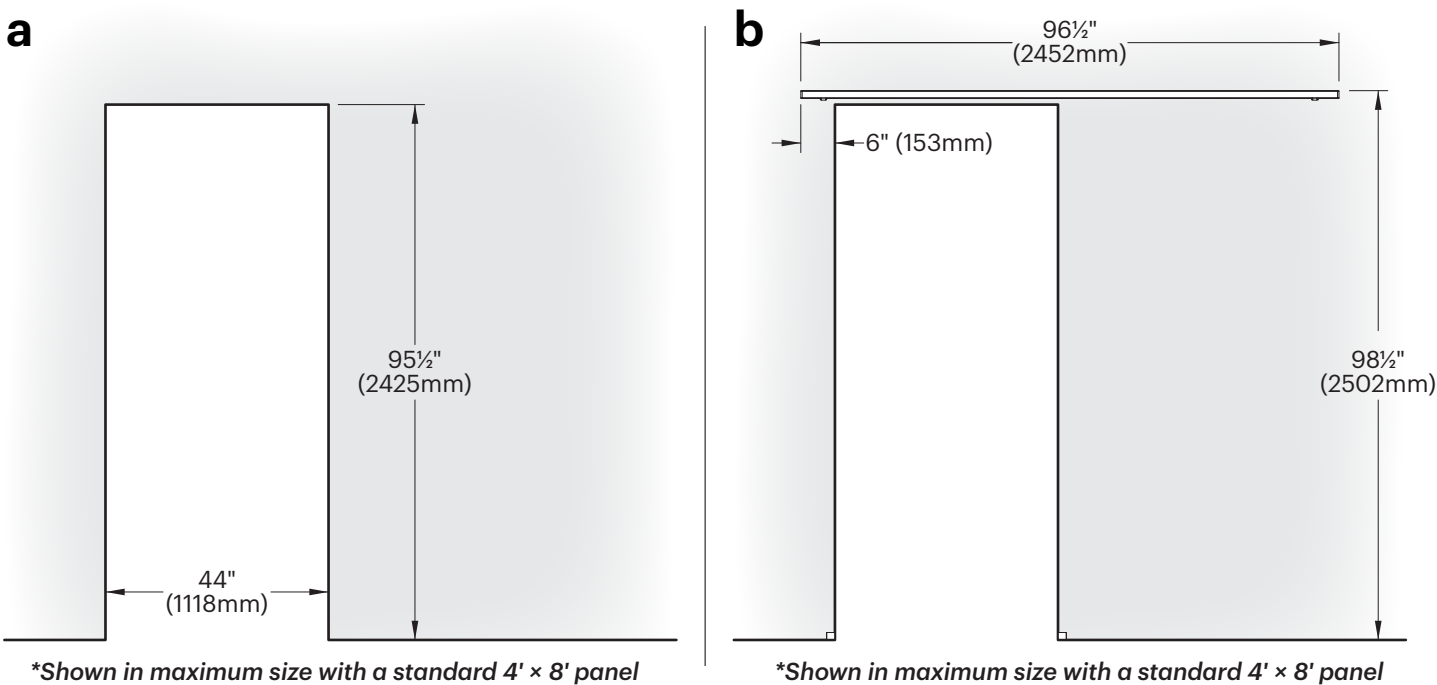


Pre-Installation

Dimensions *cont...*


c

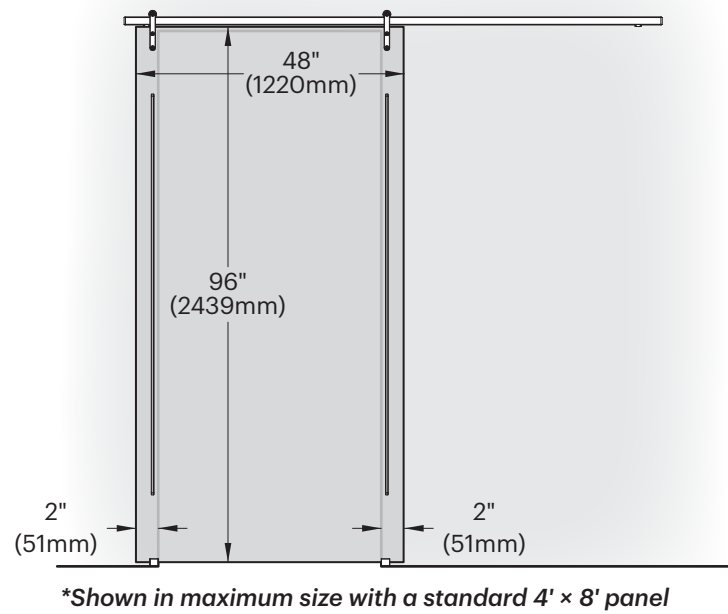

d

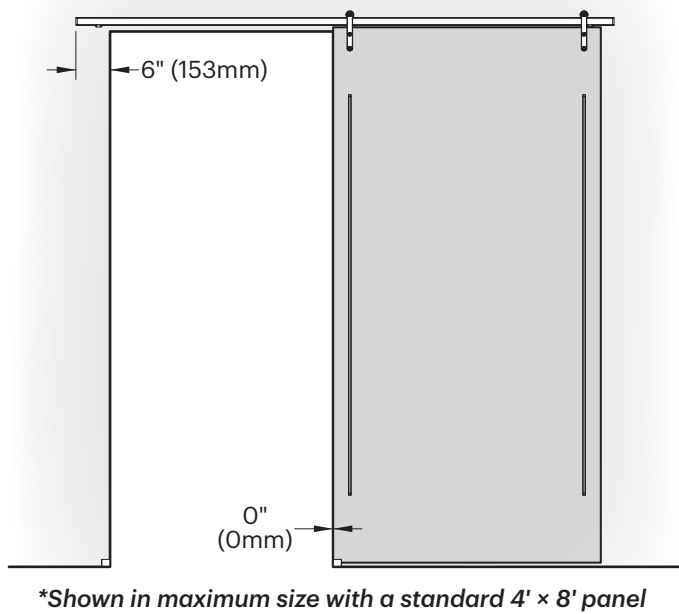


e

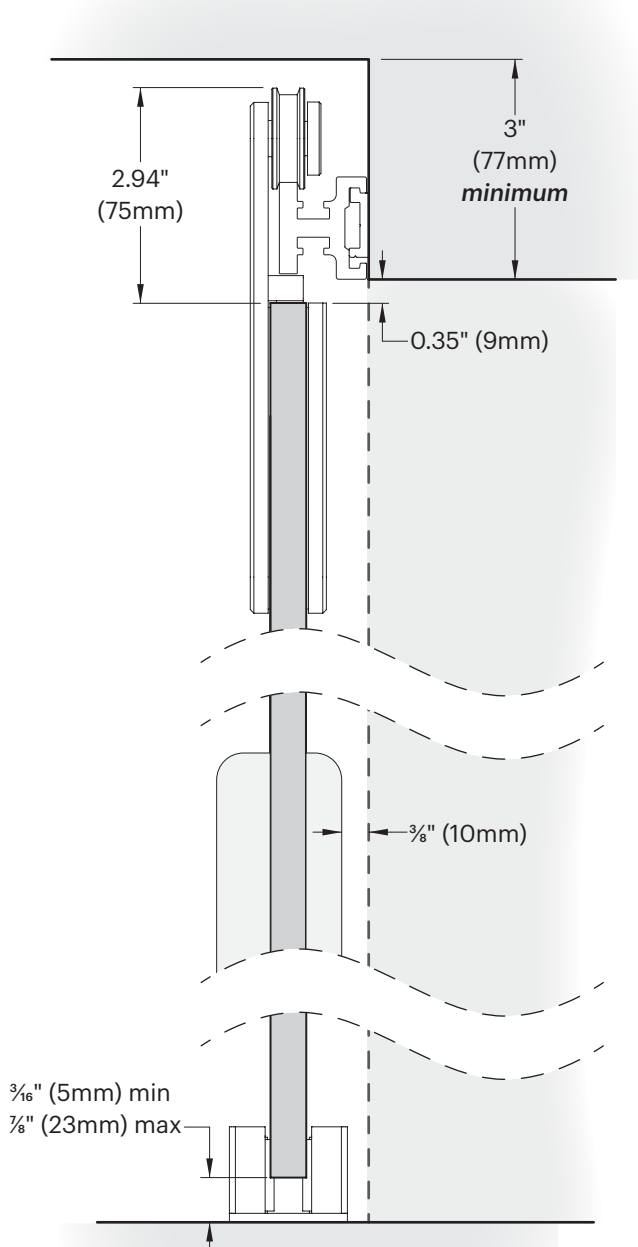

Installation


1 Mark Center Line for Track on Wall

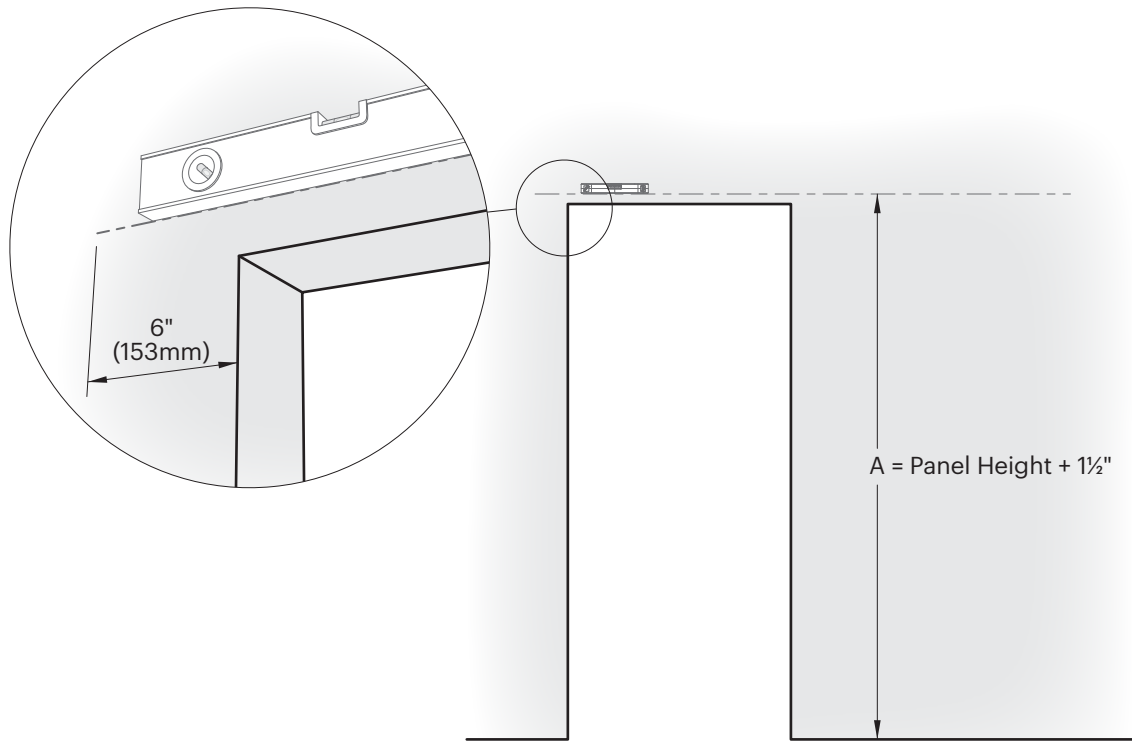


Installation

2 Attach Track to Wall


- a** Drill holes in the track for mounting at a minimum 18" o.c spacing.

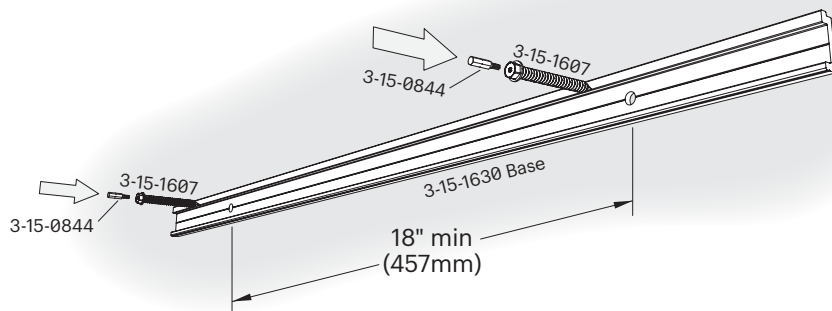

b

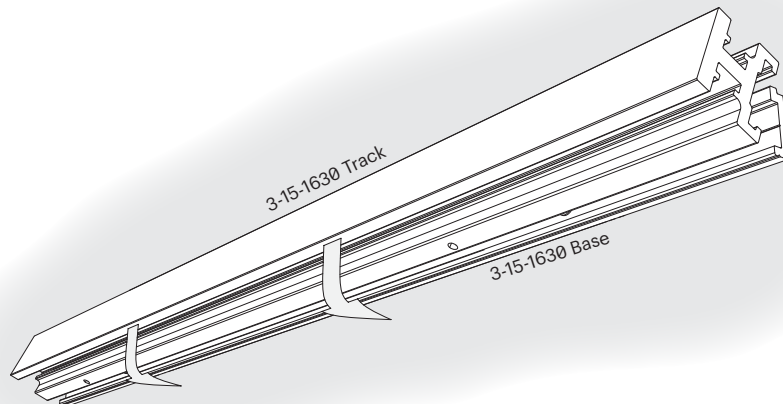


c

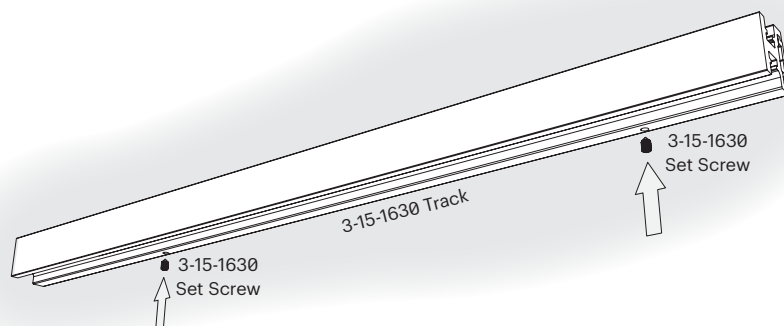


Installation

3 Attach Top Rollers to Panel

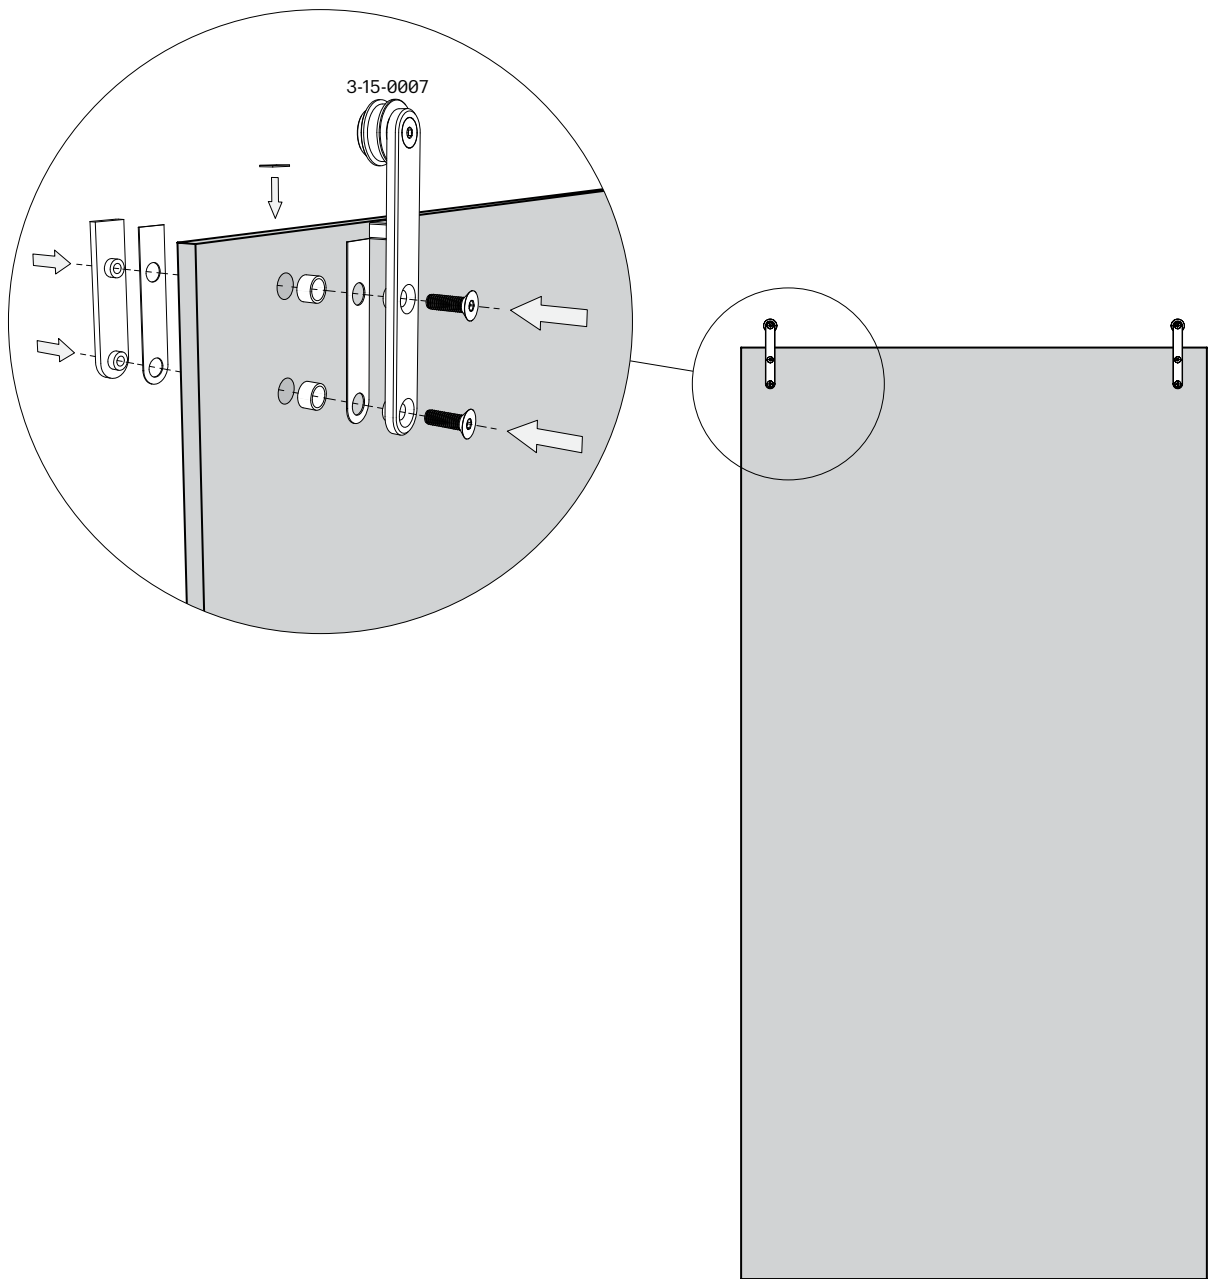

Installation


4 Attach Handles

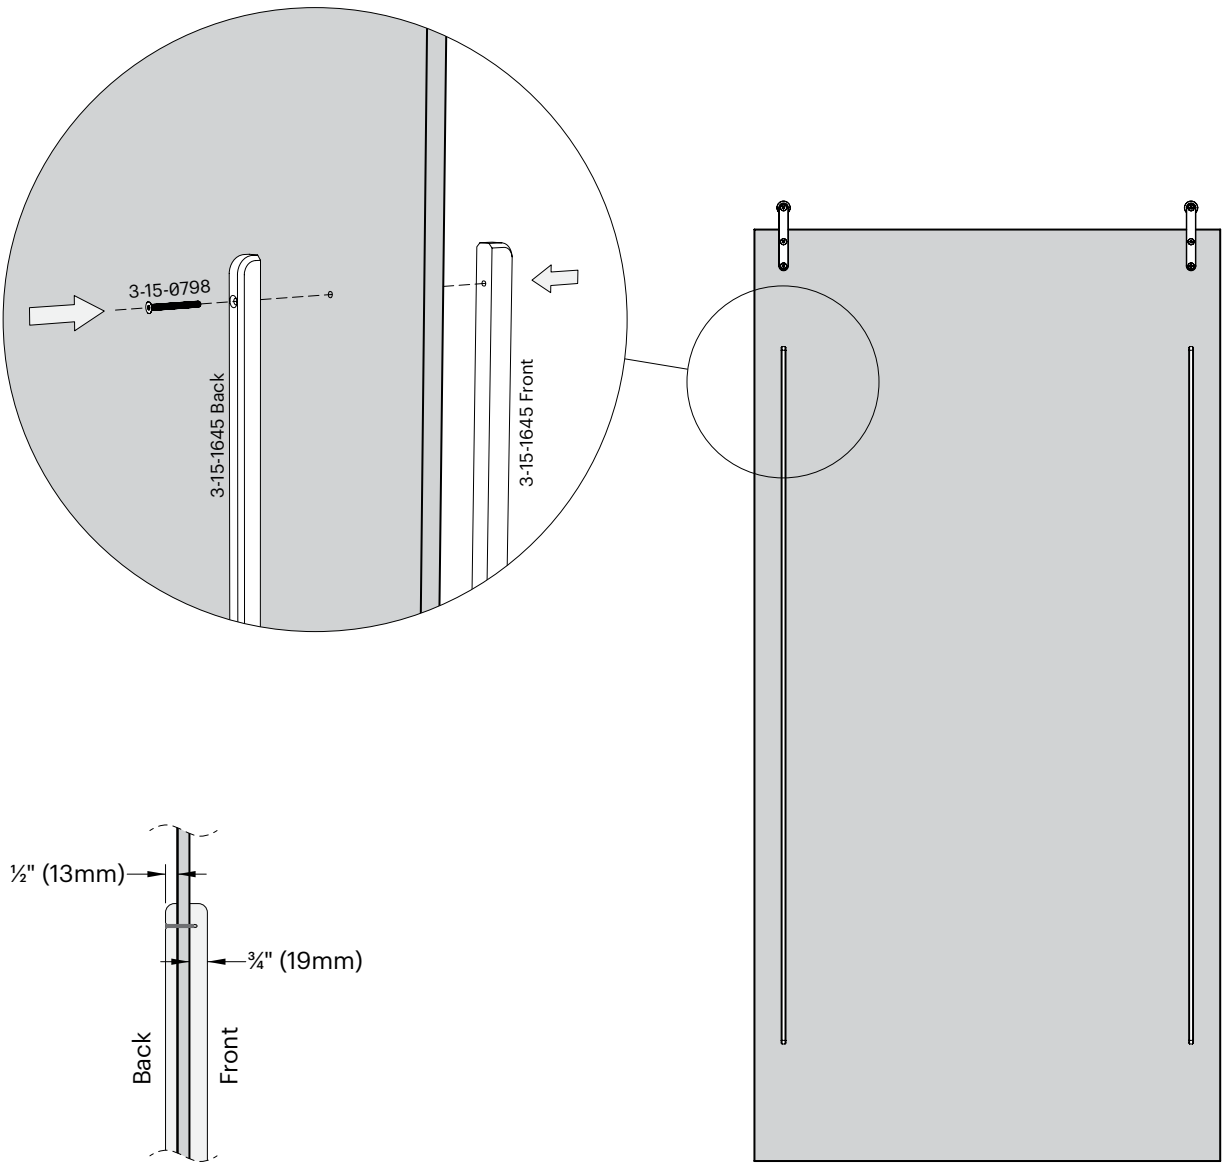

Installation

5 Install Floor Guides



If there is sufficient space to slide the door onto the track from the side, install floor guides (Step 5) before hanging the panel (Step 6a). If there is not enough space, hang the panel (Step 6b) before installing the floor guides (Step 5).

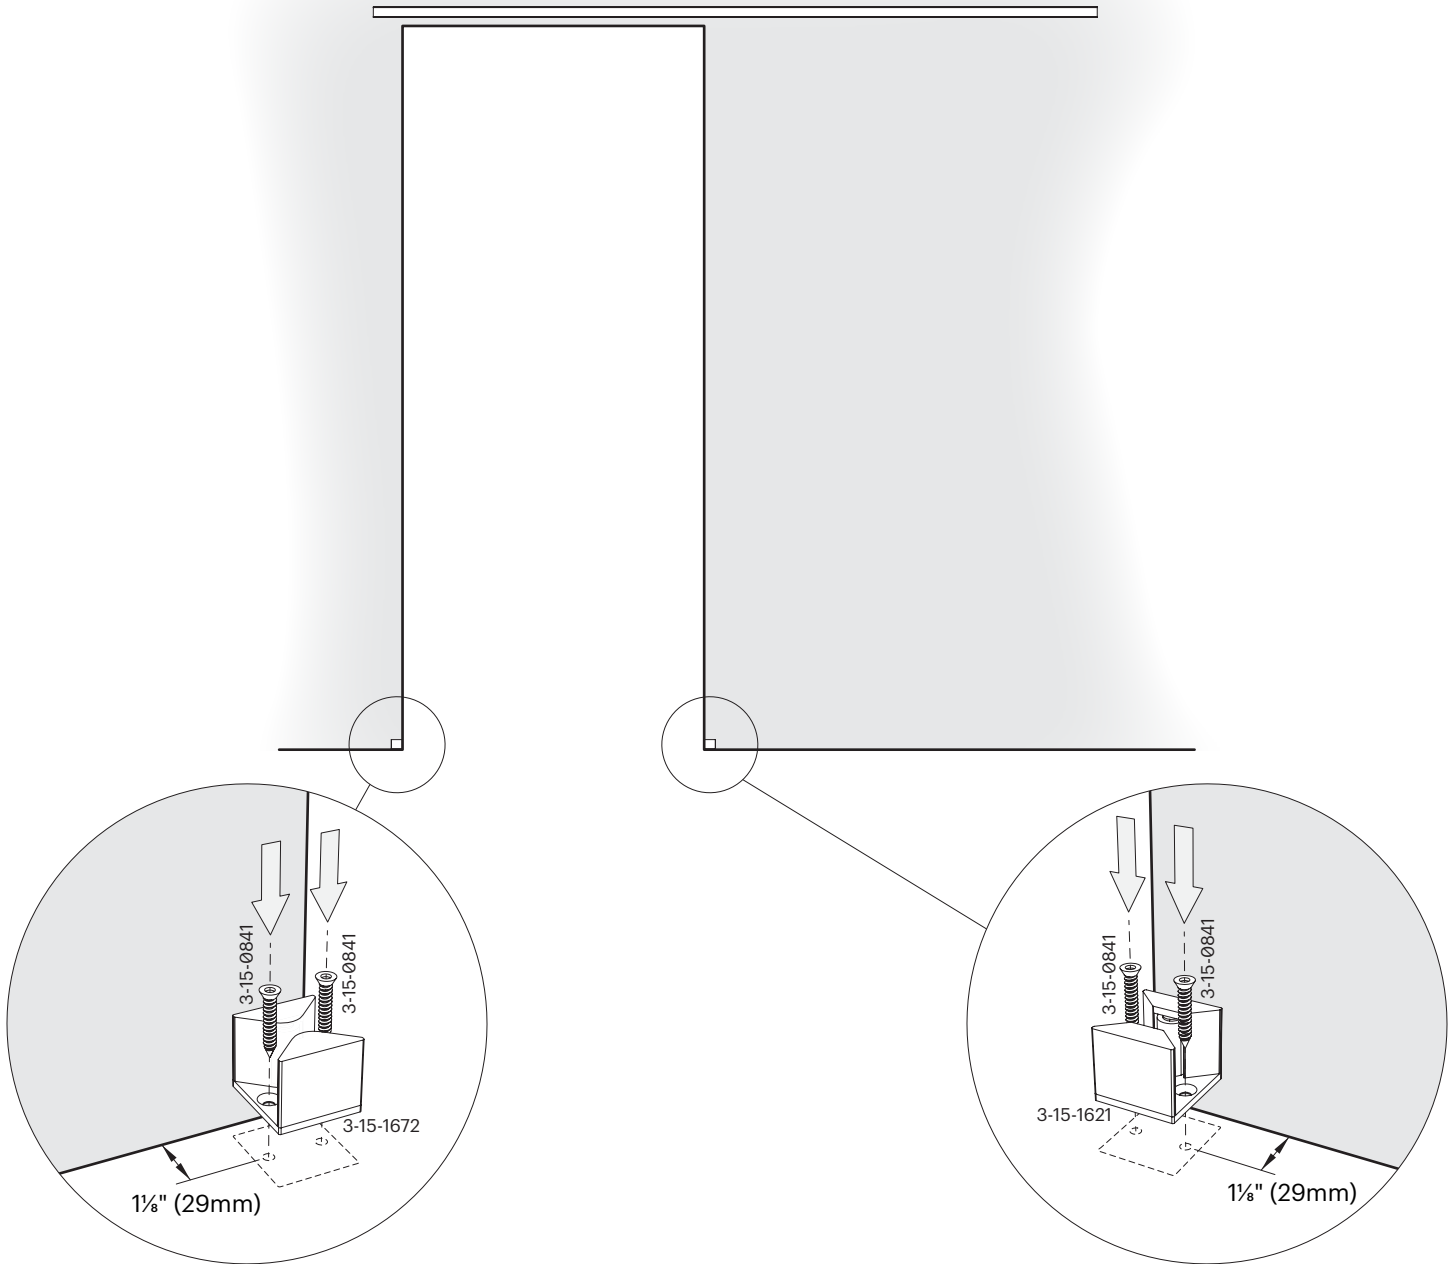



Installation

6 Hang Panel on Track

a

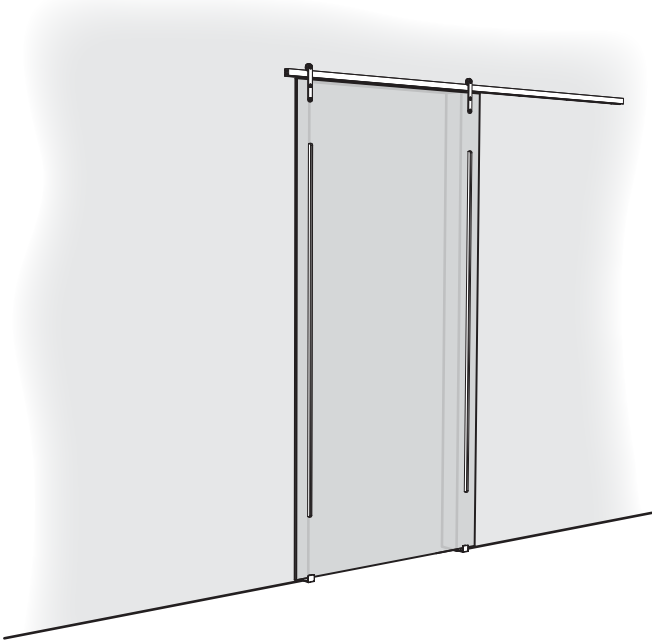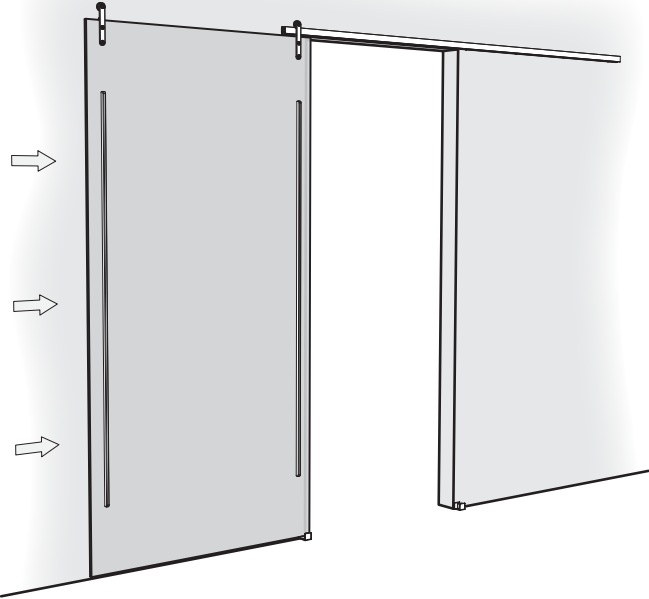

b

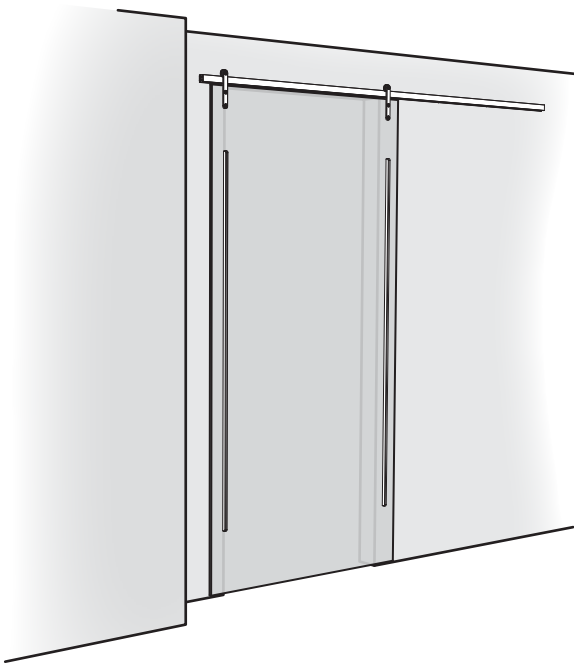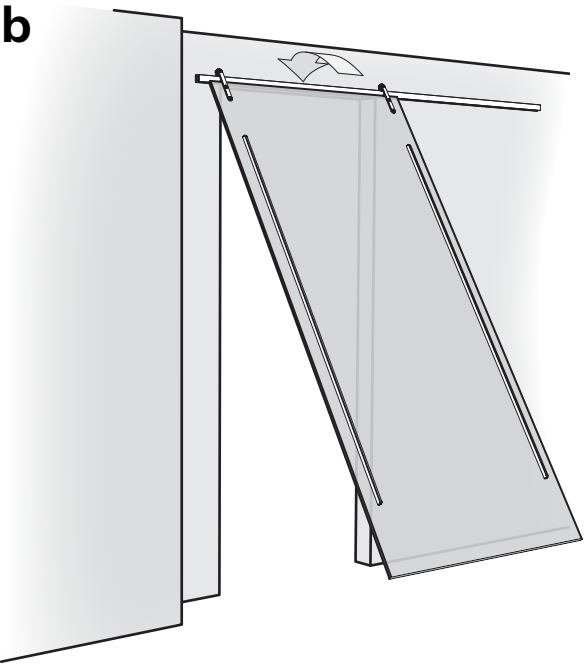

Installation

7 Attach Bumpers and End Caps

