


Ready To Go

SimpleSpec 200.42™

Installation Manual

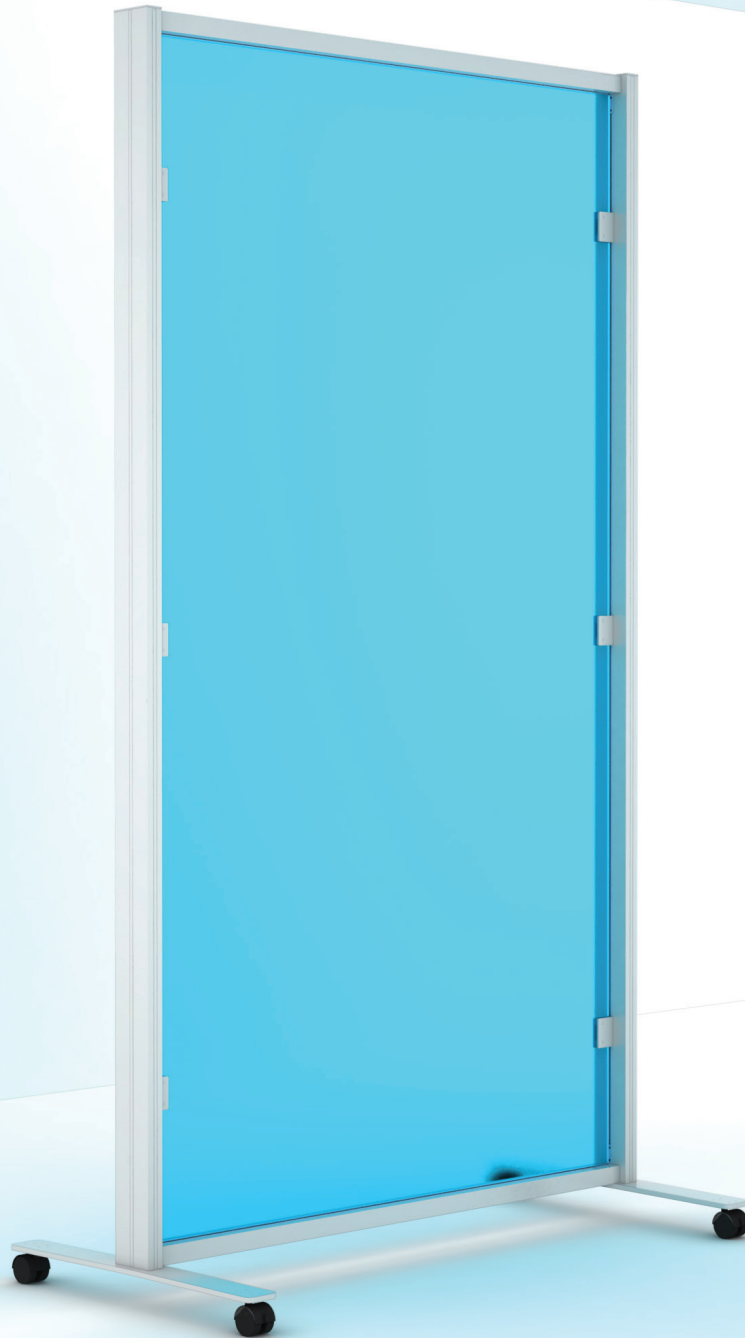


For more information, please visit [3-form.com](https://www.3-form.com) or call 800.726.0126

MARCH 2020 | MAN-RTG-200-42 | REV 002 © 2020 3form, Inc. All rights reserved.


Contents Overview

(x1)

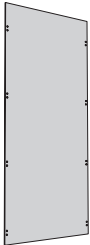


Varia Panel 3/8"

(x2)

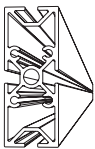

Beam Extrusion 96"
0-15-0126

(x2)

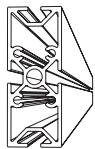


Beam Extrusion 50"
0-15-0127

(x12)



Slot Cover for Versa
3-15-1732

(x8)

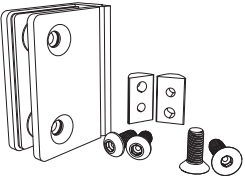

2-Piece Clamping
Bracket KIT
3-15-1752-K

(x8)



Clamping Side
Bracket
3-15-1752

(x16)



M6 T-Nut
3-15-0825

(x16)




M6x12mm Button
Head Screw

(x16)




M6x16mm
CSK Screw
3-15-0794

(x2)

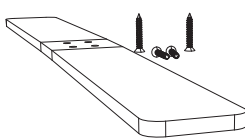

Versa Partition Foot KIT
3-15-0874-K

(x2)

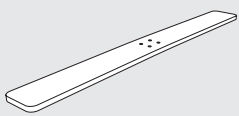


Free-Standing Foot
3-15-0874

(x8)




12x1.5 FH SQ SMS
3-15-0869

(x2)

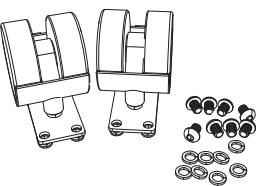

Versa Caster
with Brake KIT
3-15-1837-K

(x4)

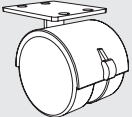

Furn Caster
with Brake
3-15-1837

(x16)



M6 x 8mm Button
Head Cap Screw
3-15-1838


(x16)



M6 Lockwasher
3-15-1839

Contents Overview


(×4)

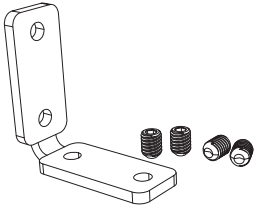

Versa Perpendicular Attachment Bracket Kit
3-15-1840-K

=

(×4)

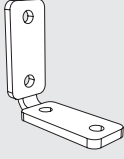

Perpendicular Attachment Bracket
3-15-1840


+

(×16)



Set Screw M6 × 8 Cup Point
3-15-0774


(×2)

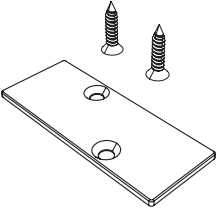

Top Cap KIT
3-15-0139-K

=

(×2)

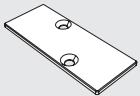

Beam Top Cap
3-15-0139

+


(×4)



12 × 1 FH SQ SMS
3-15-0868


Overview

The Ready To Go 200.42 solution is a free standing application that serves as a movable way to partition or divide space. The 2-piece clamping bracket allows for easy installation and removal of panels. The optional casters make the partition even easier to move.

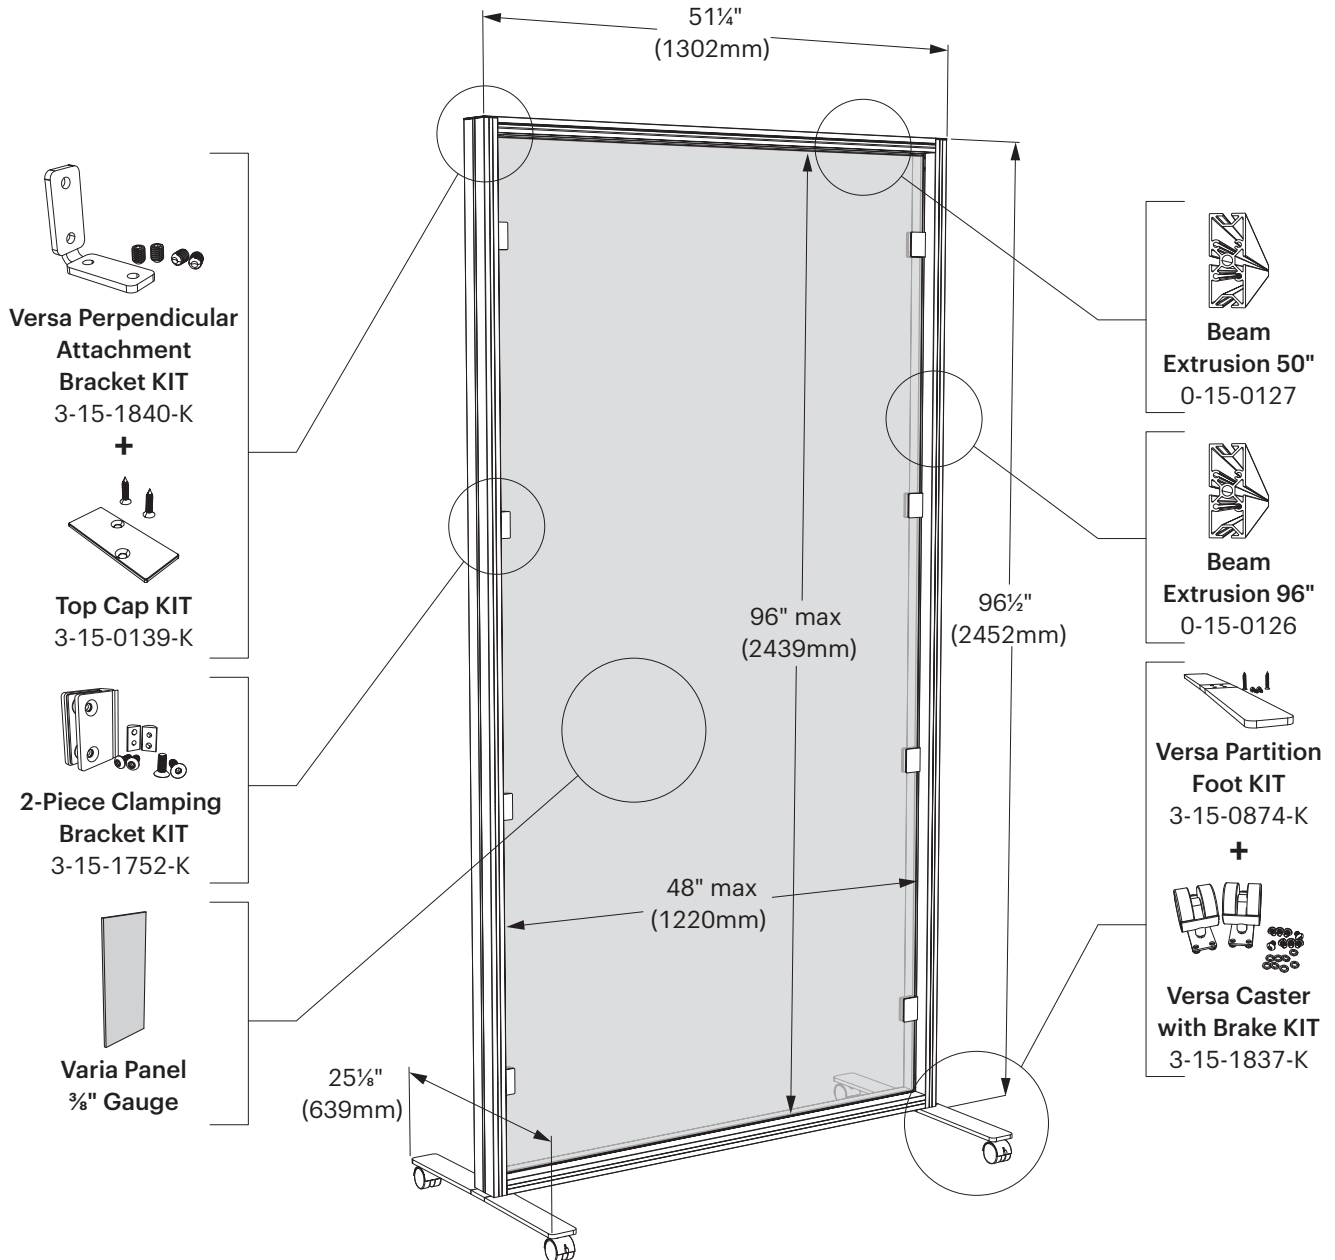


Installation

Required Tools

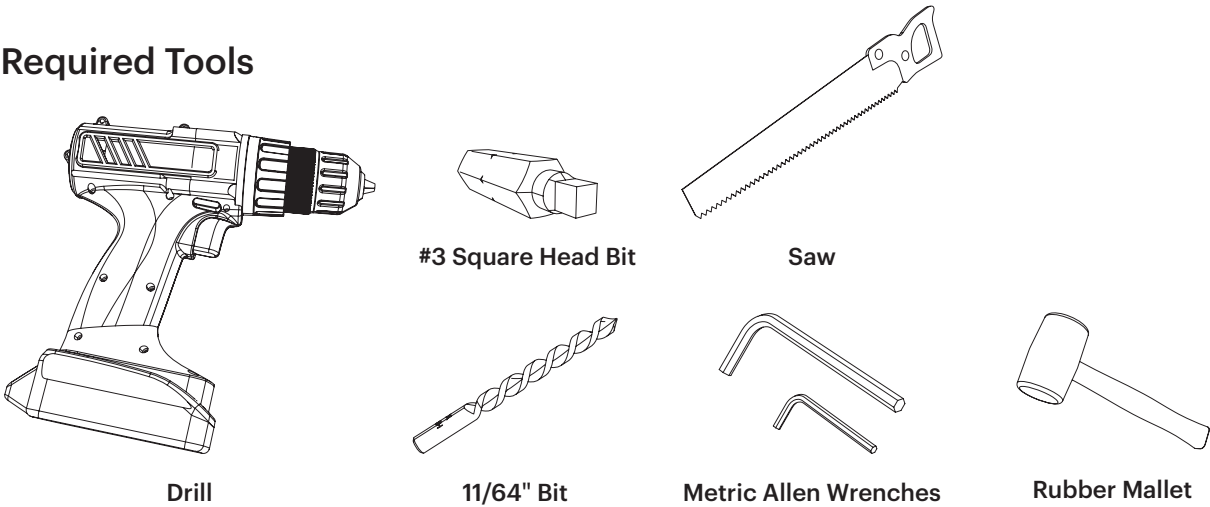


1 Attach Free-Standing Versa Feet to Vertical Extrusions

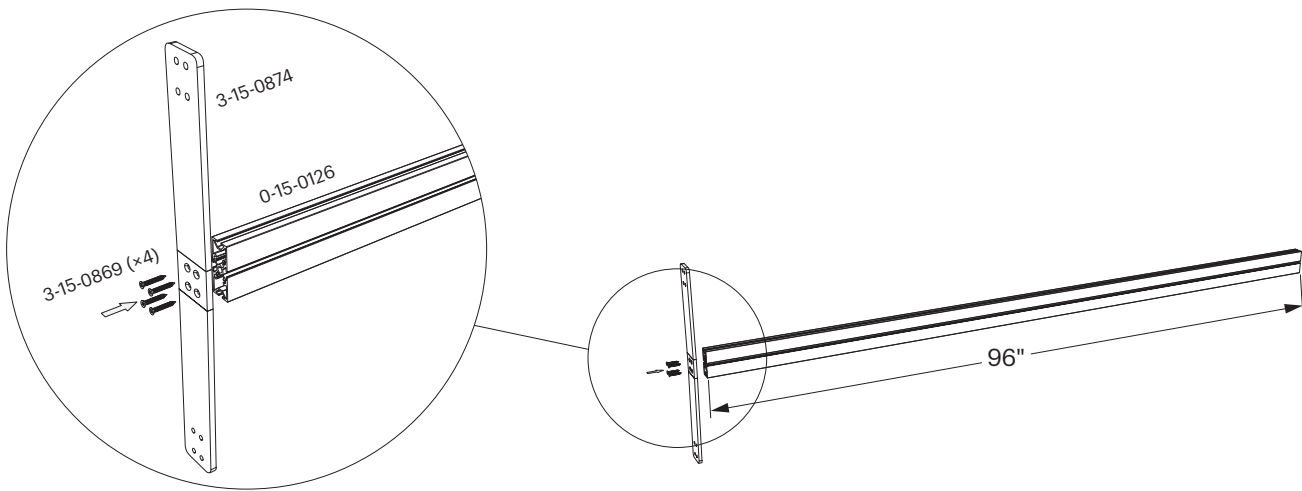


Installation

2 Insert Side Brackets into Vertical Holes


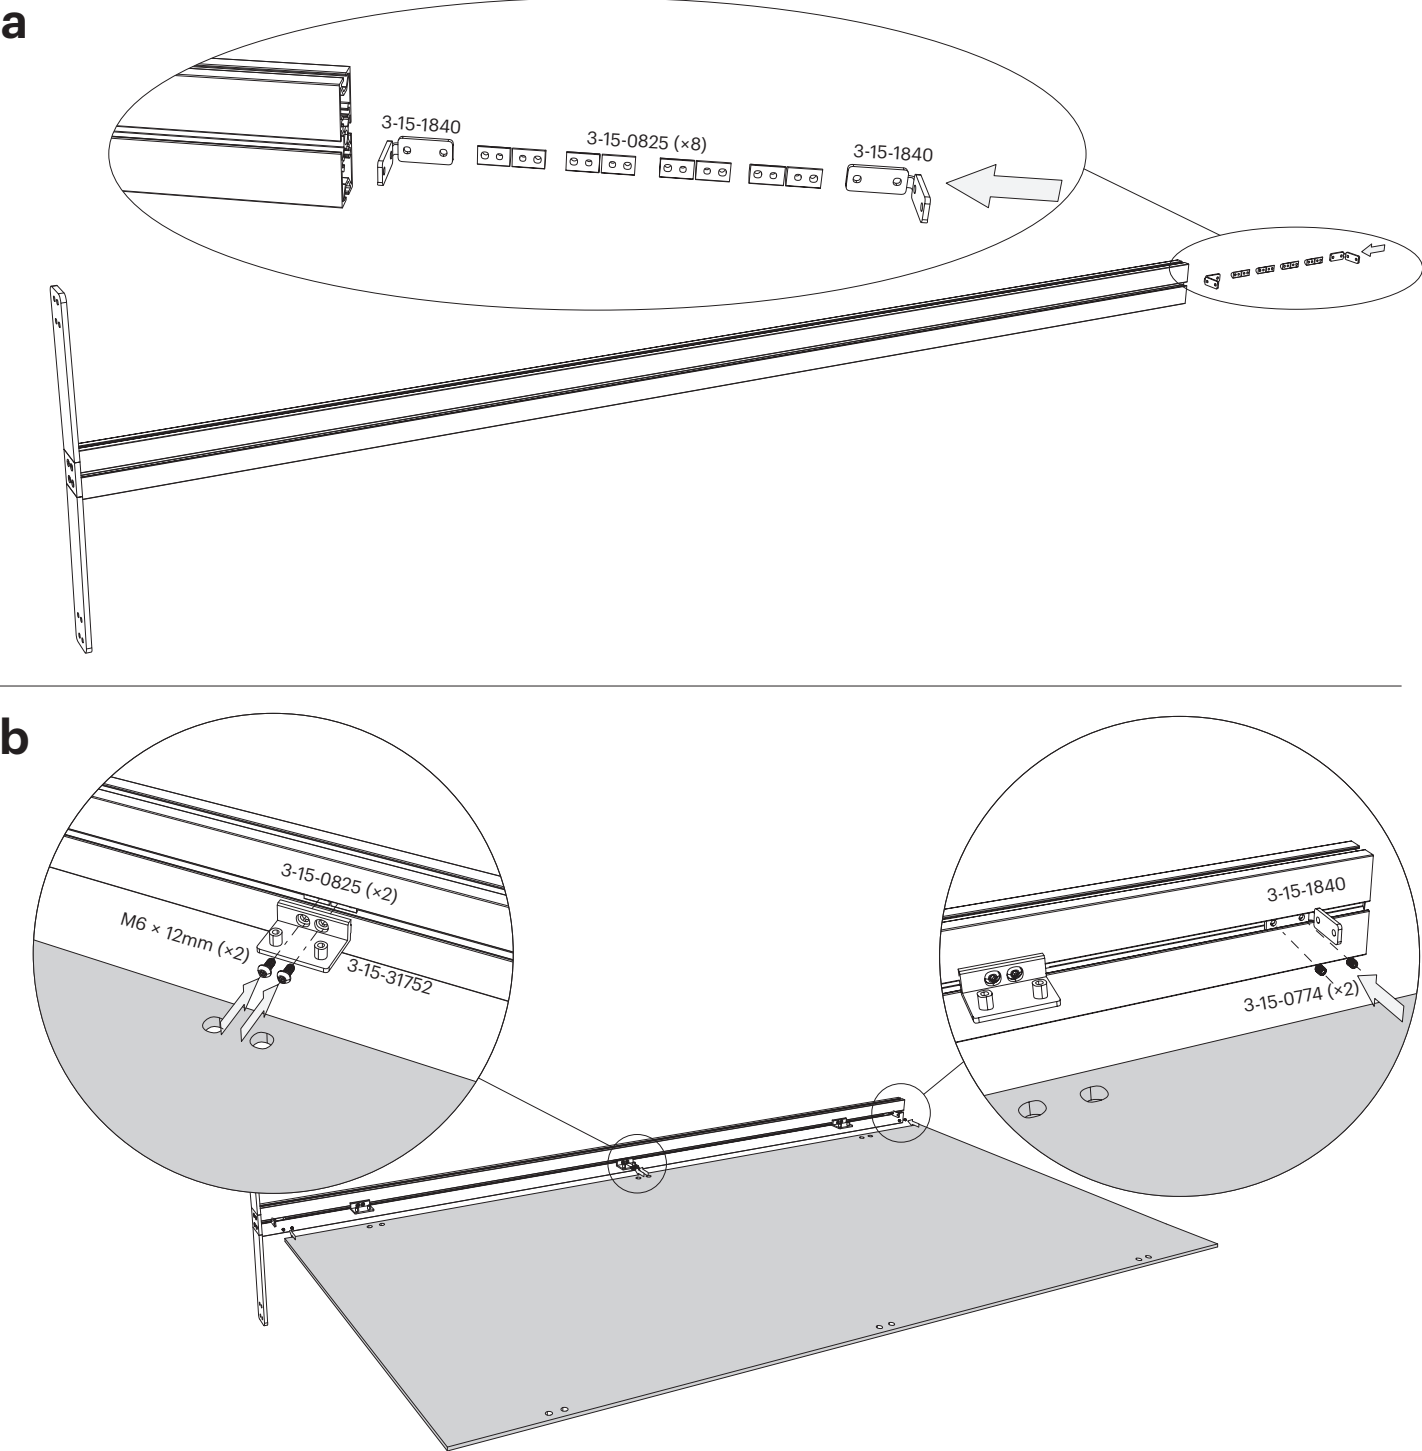


Installation

3 Attach Perpendicular Extrusions

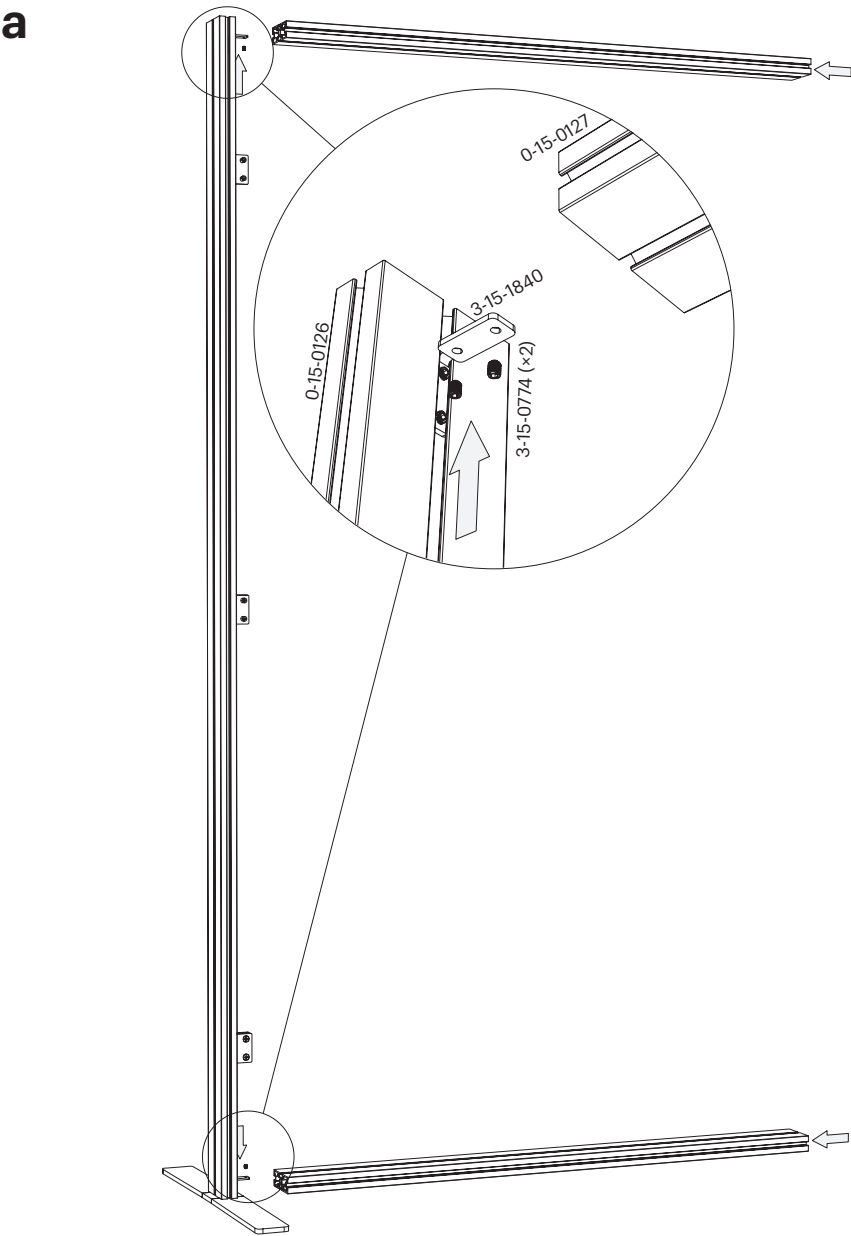


**Leave room for Top Cap to be flush to Horizontal Profile.*

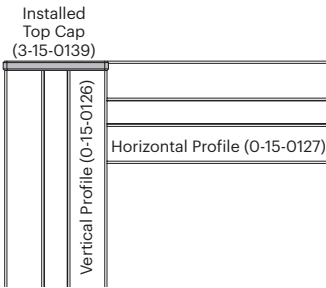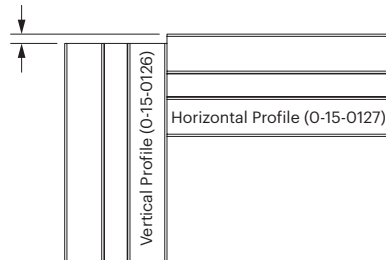

Installation


3 Attach Perpendicular Extrusions cont...

b

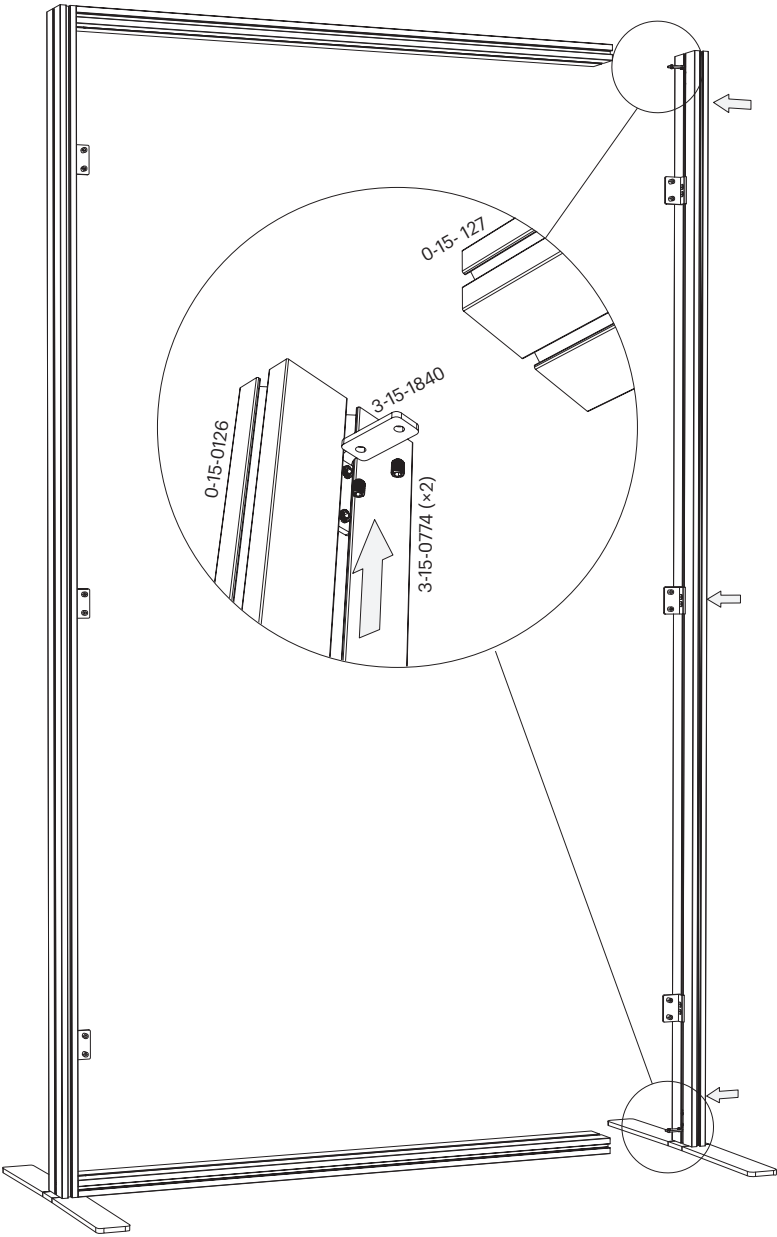


Installation

4 Install Varia Panel

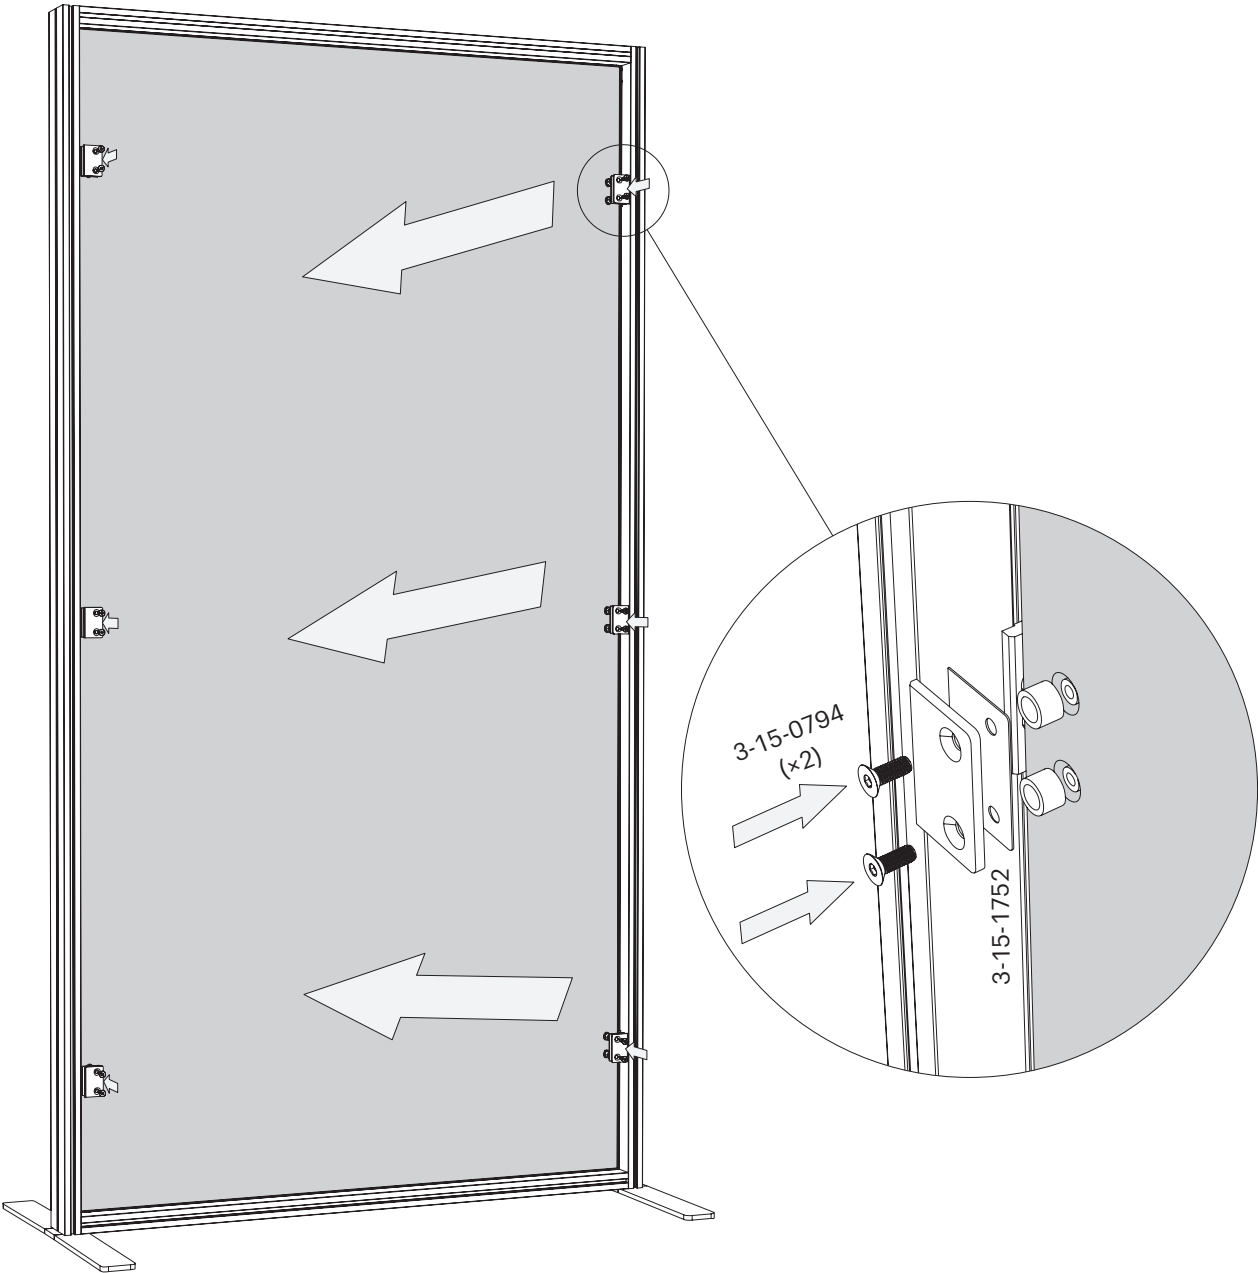


Installation

5 Attach Casters - *Optional*

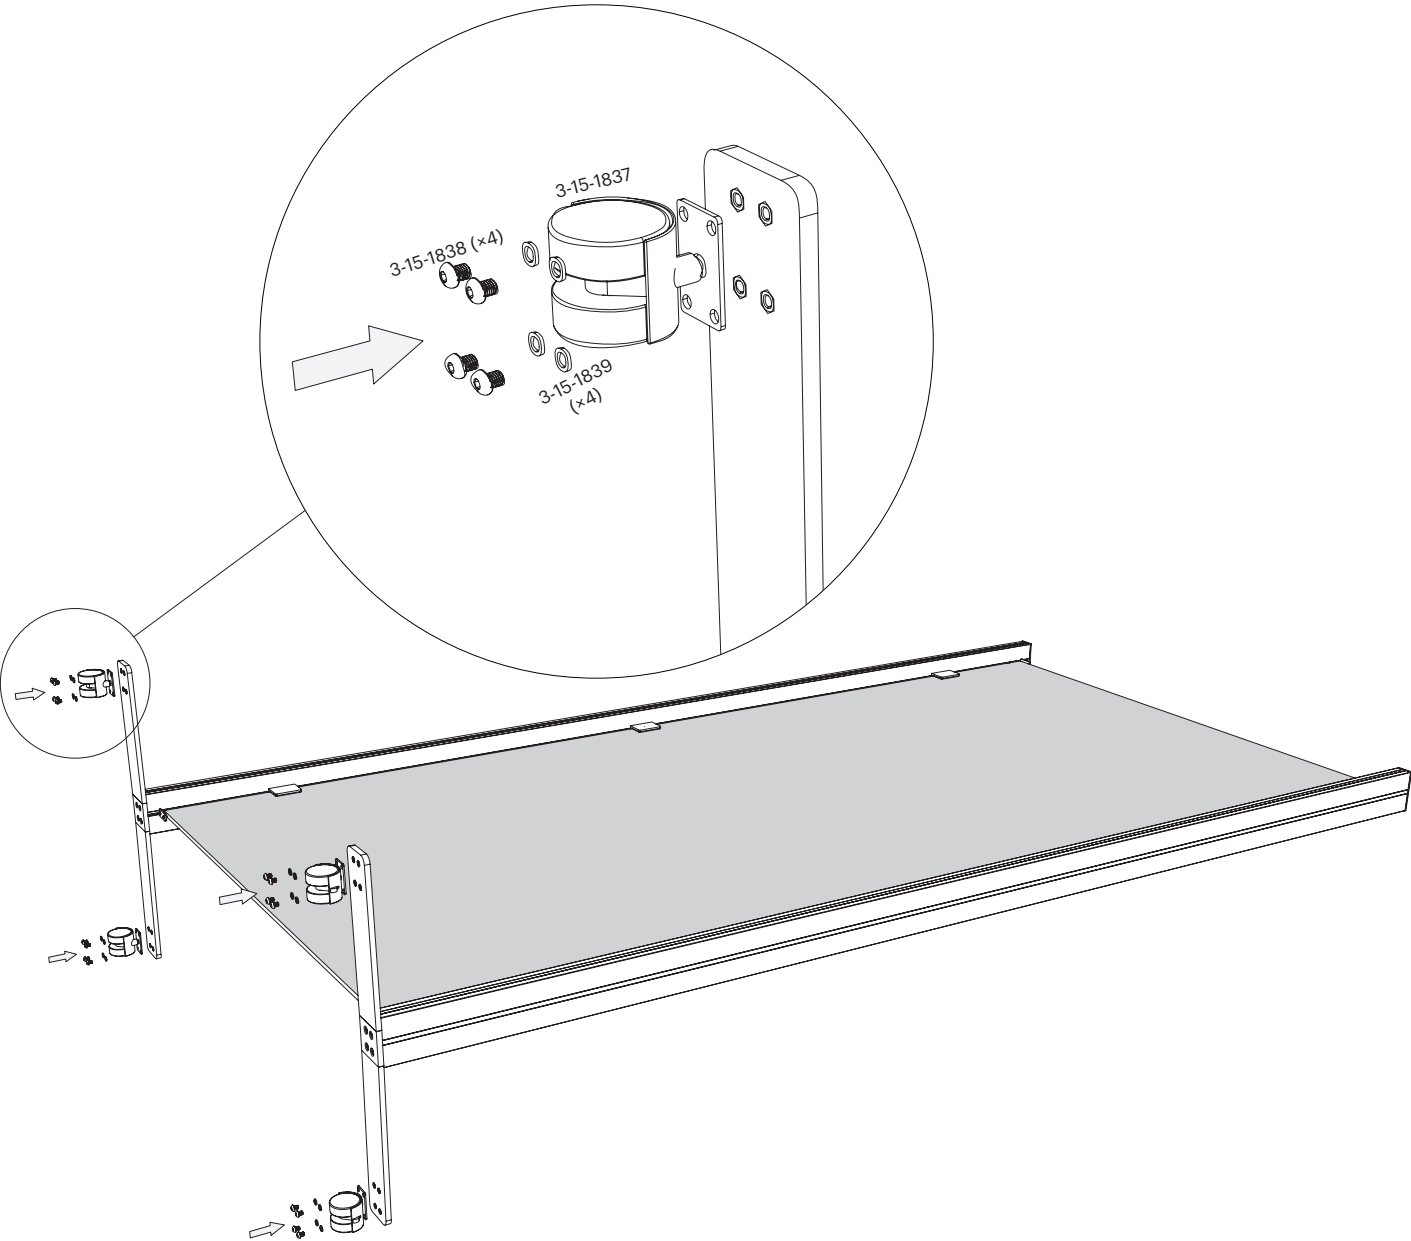

Installation


6 Attach Top Caps

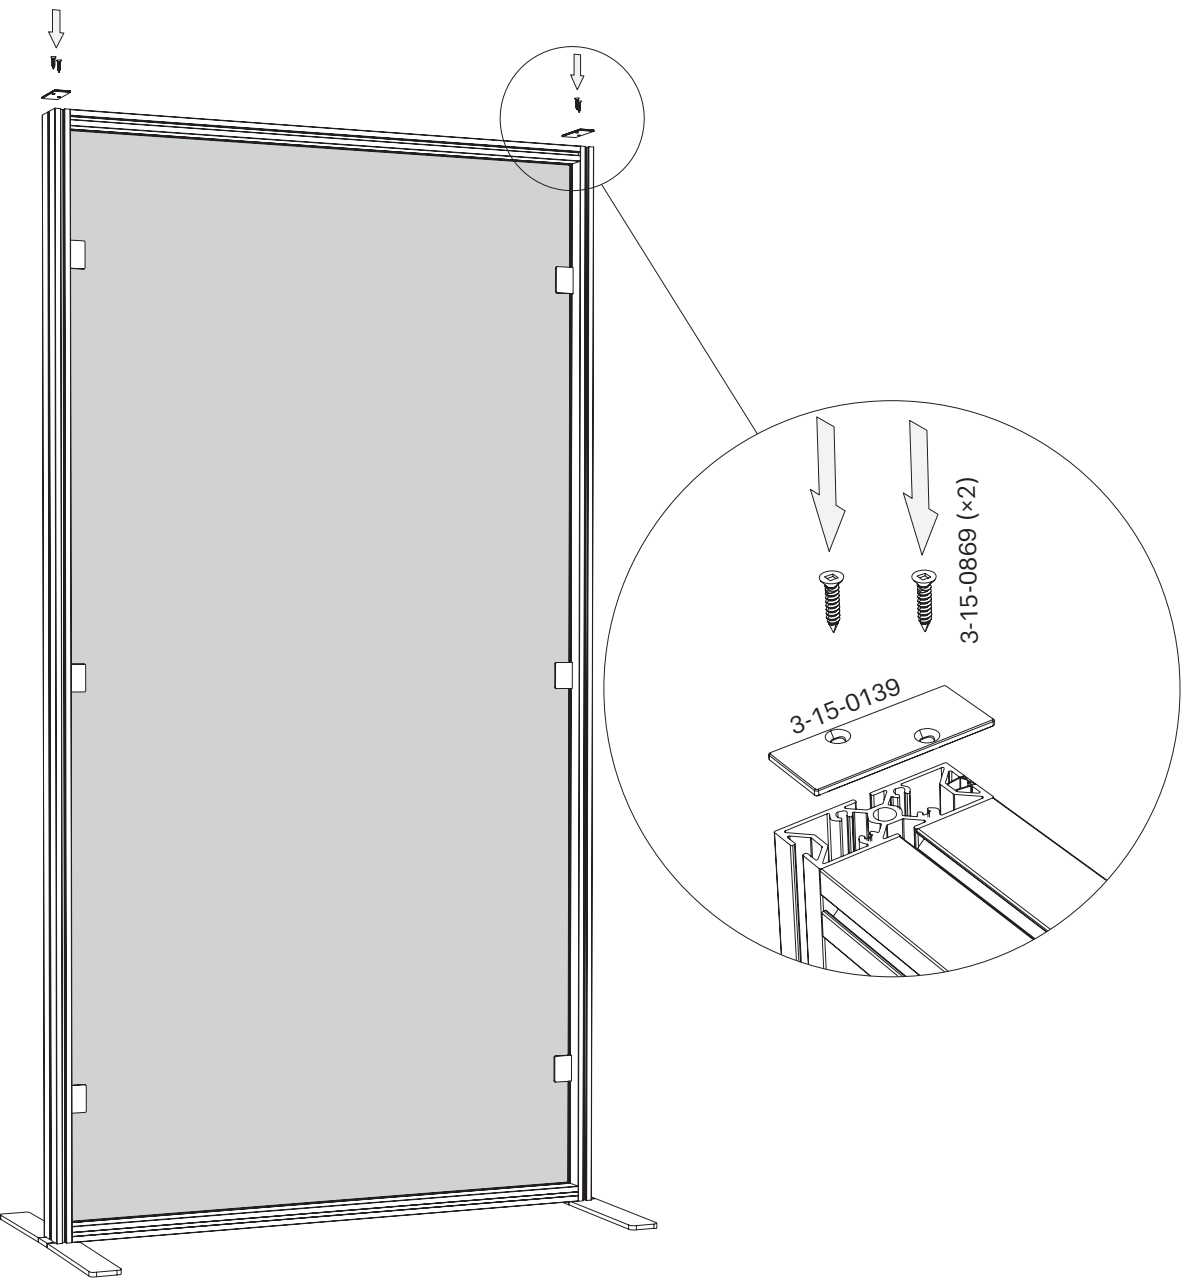

Installation

7 Attach Slot Covers

a Cut slot covers to size.

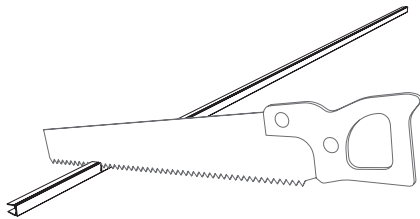

b Attach slot covers on outer edges of assembly.

