



Ready To Go

SimpleSpec 200.97-Divide™

Installation Manual



Contents Overview

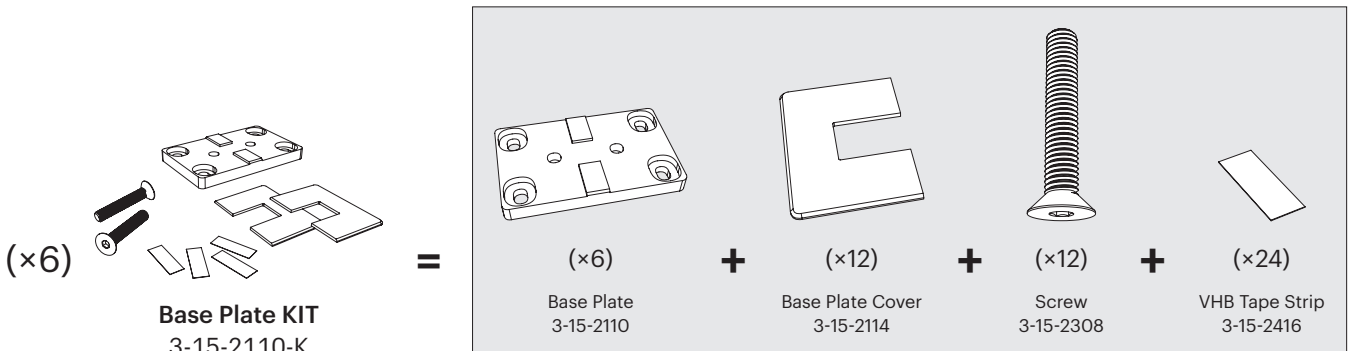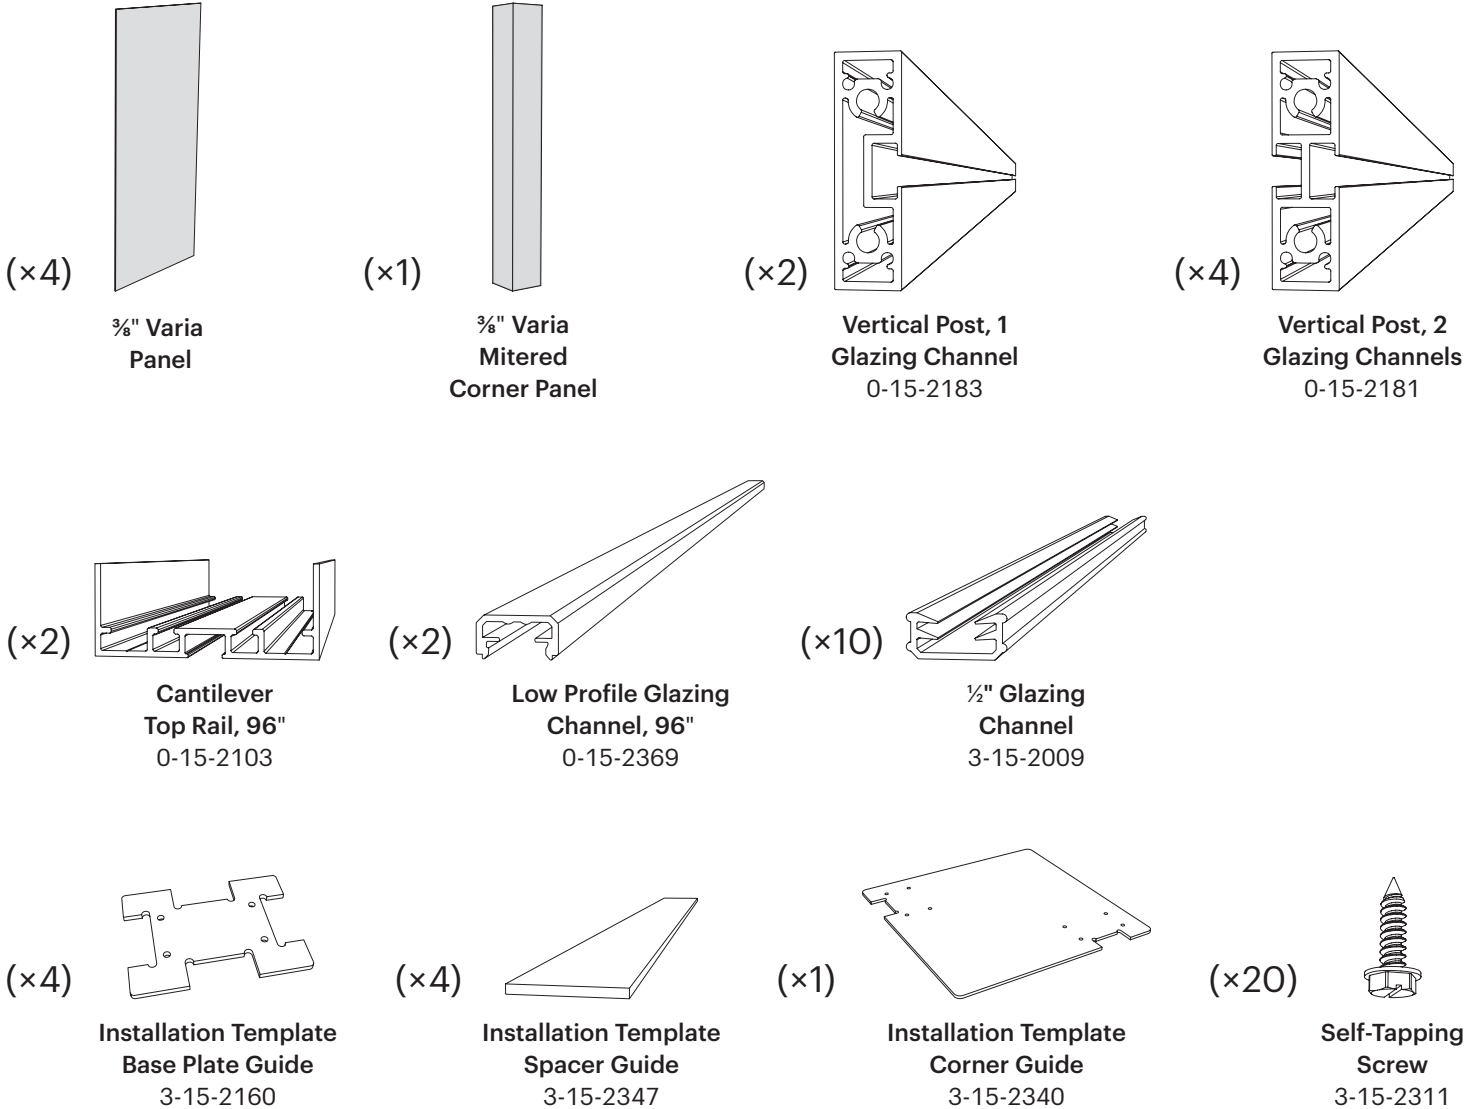

Contents Overview

(×2)

Top Rail End Cap KIT

3-15-2116-K

=

(×2)

Top Rail End Cap

3-15-2116

+

(×4)

Top Rail Low Profile M6 T-Nut

3-15-2123

+

(×4)

Screw

3-15-2312

(×1)

Top Rail Mitered Corner KIT

3-15-2118-K

=

(×1)

Top Rail Mitered Corner Bracket

3-15-2118

+

(×4)

Top Rail Low Profile M6 T-Nut

3-15-2123

+

(×4)

Screw

3-15-2312

+

(×2)

Low Profile Glazing Channel Miter Corner

3-15-2371

+

(×1)

Top Rail Miter B Length

3-15-2174

+

(×1)

Top Rail Miter A Length

3-15-2118

(×6)

Base Plate Universal Anchoring KIT

3-15-2119-K

=

(×24)

M8x105 Concrete Lag Screw

3-15-2309


+

(×24)

Hex Head Wood Lag Screw

3-15-2310

Overview - Divide Partition 9'x9' Corner

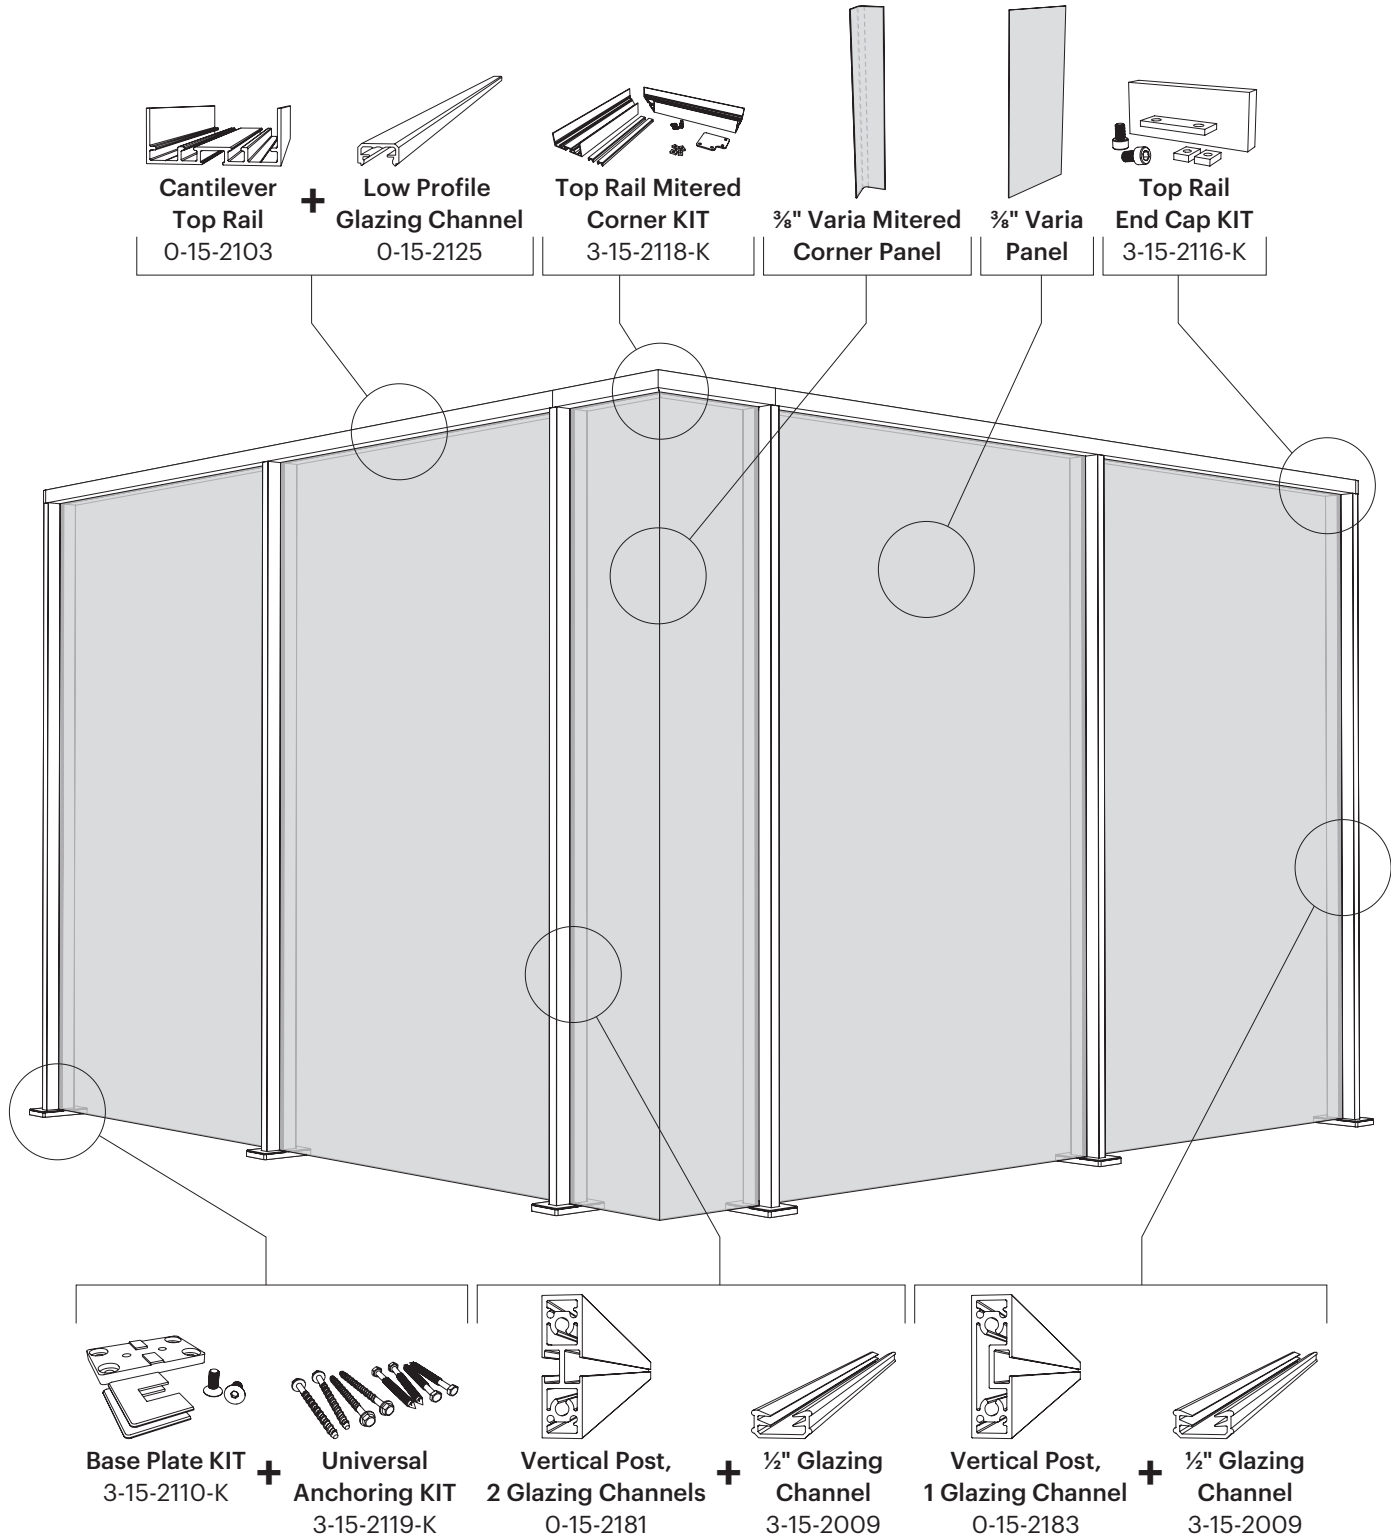


Overview - Accessory Options


Divide Partition Systems also accommodate a number of accessory options to customize the use for your application. Contact your 3form Elements Dealer for additional information.

Markerboard and Markerboard Shelf


Post to Post

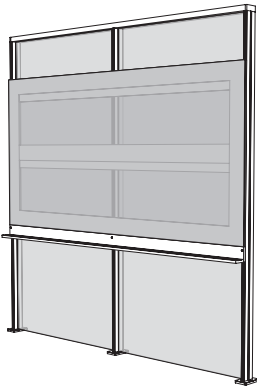


Inset on Hush Mount

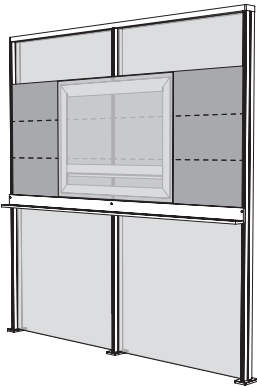


Accessory Shelf

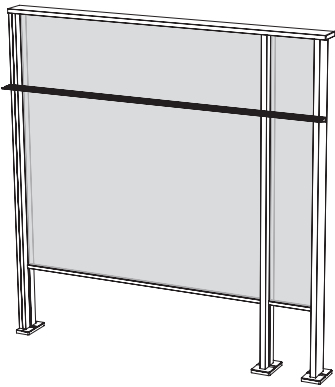

Hush Mount

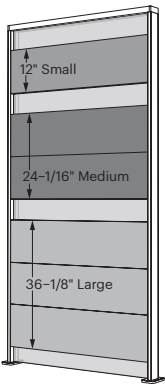


TV Mount

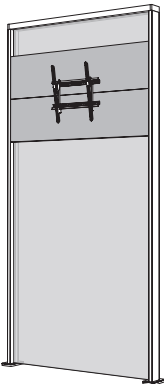


Coat Hook


Post Attachment




Hush Mount Attachment

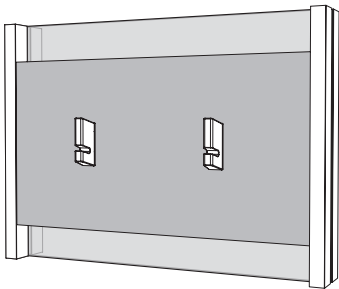

Hush Bar

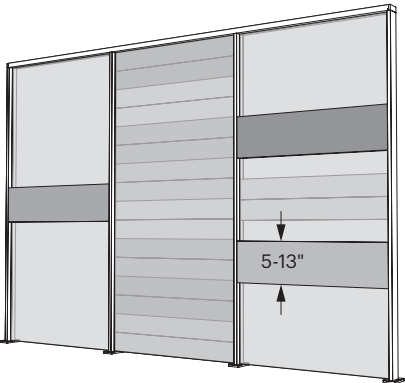


Shelves and Shelving Bracket

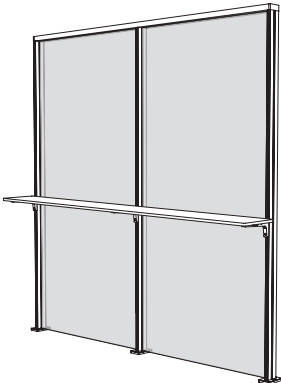


Installation

Required Tools

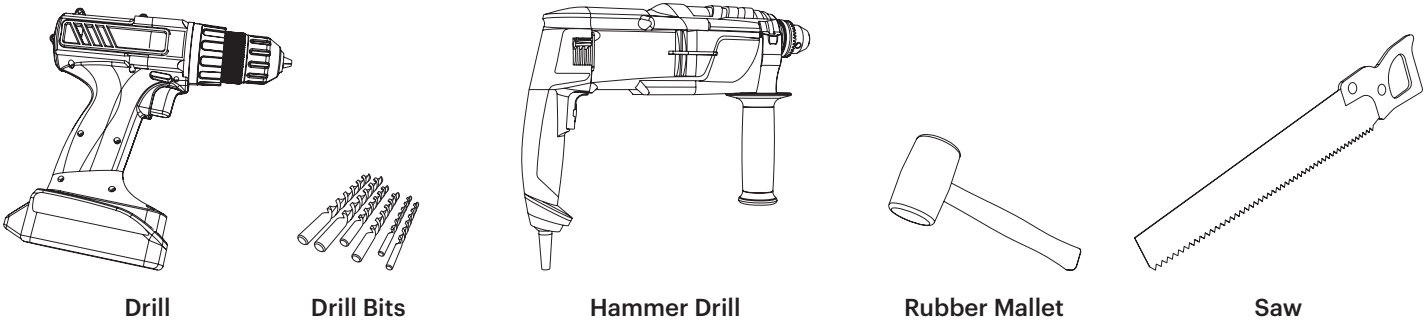

1 Drill Pilot Holes (×24)

- a** Base Plate templates (3-15-2160) and a Corner template and will be provided. The templates have hole locations for drilling. Spacers (3-15-2347) will also be provided, unique to this configuration.

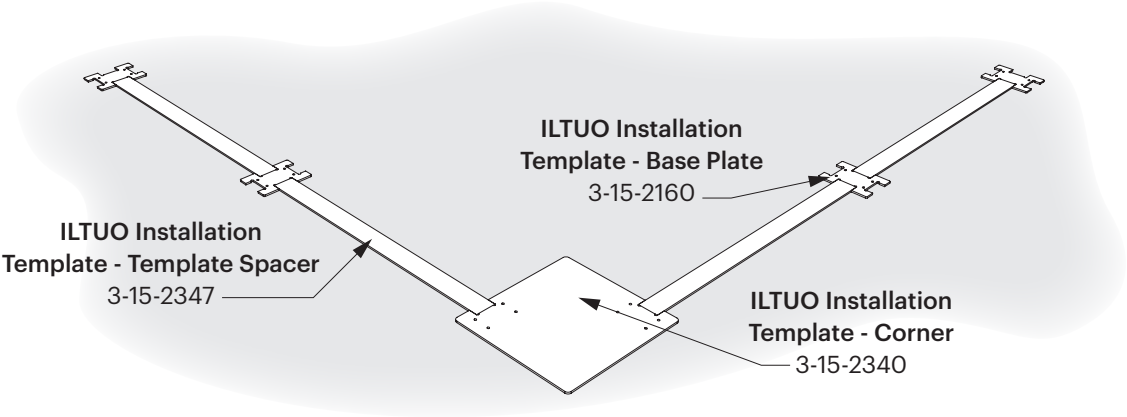

- b** Following the Installation Template, drill pilot holes. Use appropriate pilot hole diameter and depth for the type of substrate you are fastening to.


**3form stocks the drill bits required for the concrete and wood pilot holes. If you wish to purchase a drill bit, please contact your 3form sales representative.*

Substrate	Ø	Drill Bit	Depth	Anchors
Concrete	8mm	3-15-2350	min 4.3"	3-15-2309
Wood	3/16"	3-15-2335	min 3.5"	3-15-2310


Installation

2 Assemble Vertical Posts


- a** Cut Glazing Channel (3-15-2009) to 5' 10" lengths. (×10)

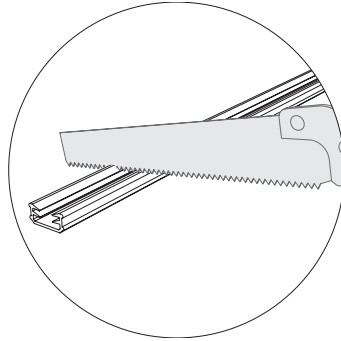

- b** Assemble Vertical Posts (0-15-2182). (×2)

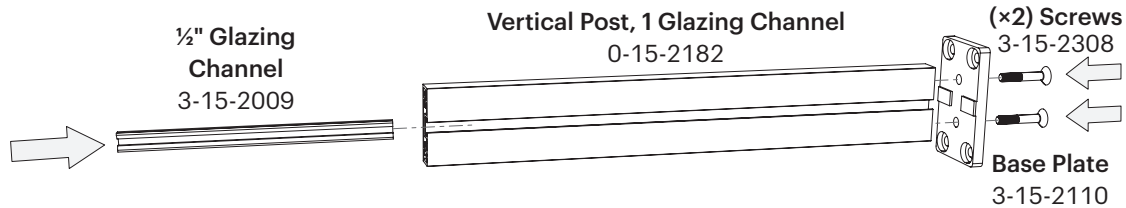


Assemble Vertical Post (0-15-2181). (×4)

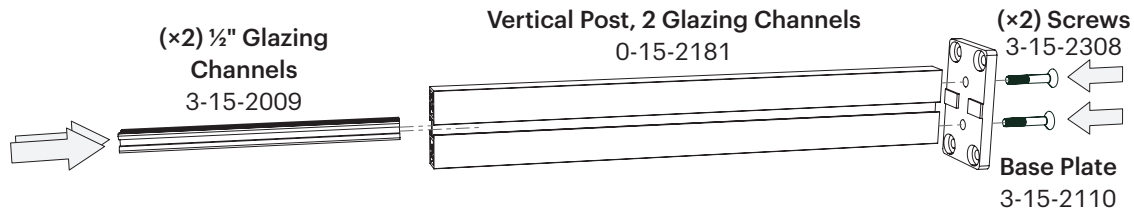


Installation

3 Secure First Vertical Post to Floor

Use hammer drill to secure post.

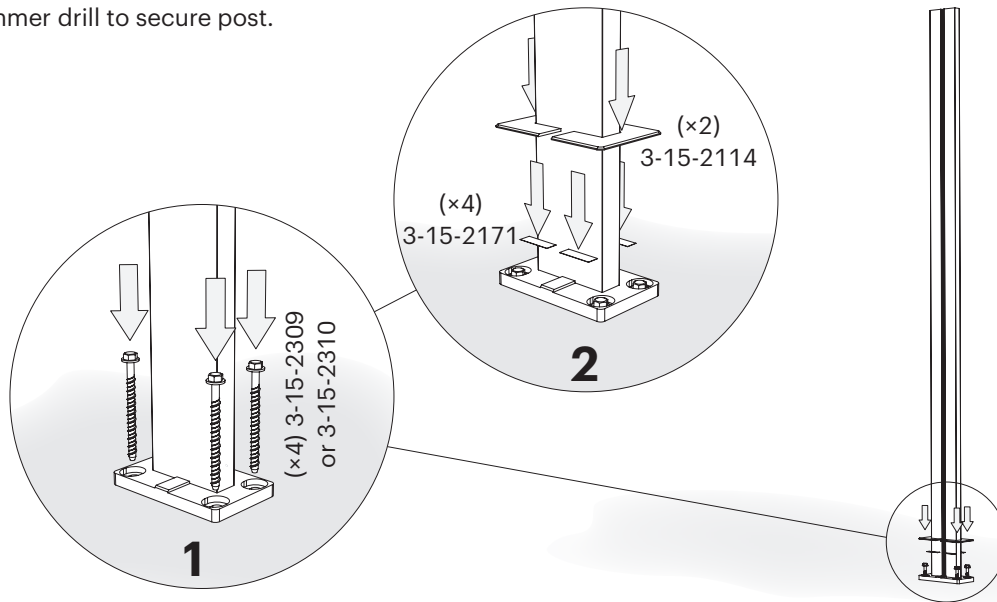


4 Install First Varia Panel

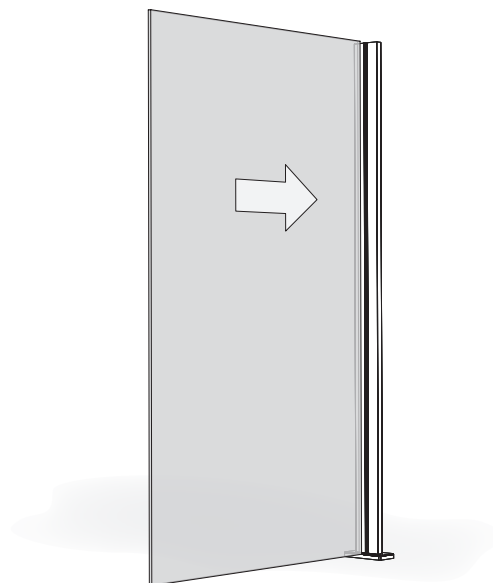


Installation

5 Install Second Vertical Post

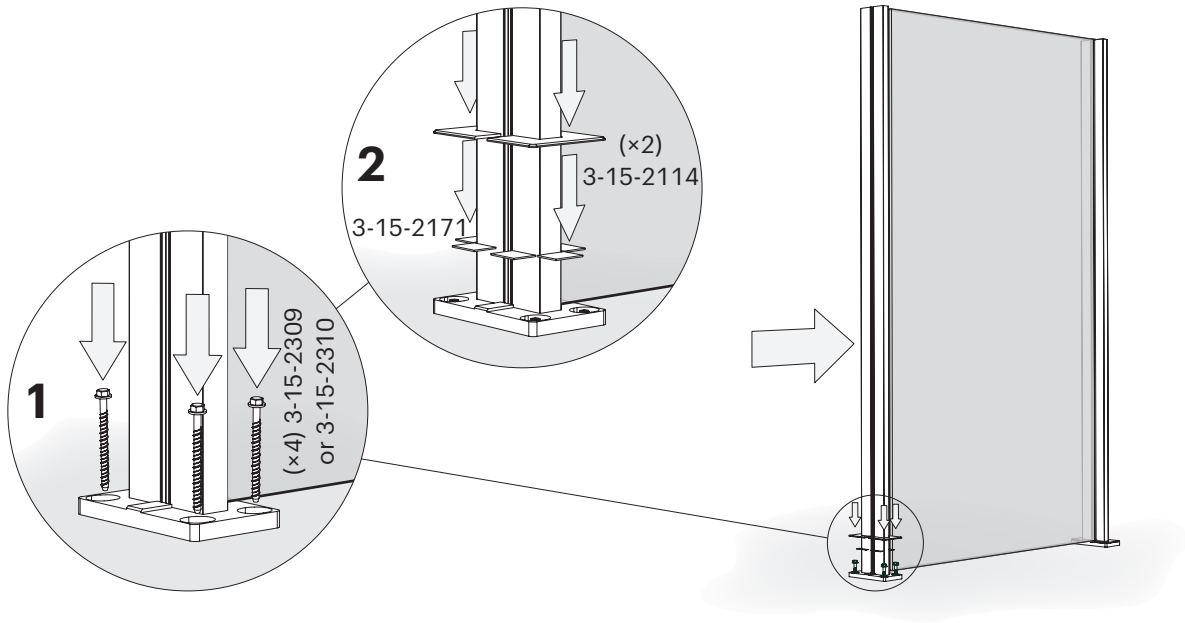



6 Install Remaining Posts and Panels

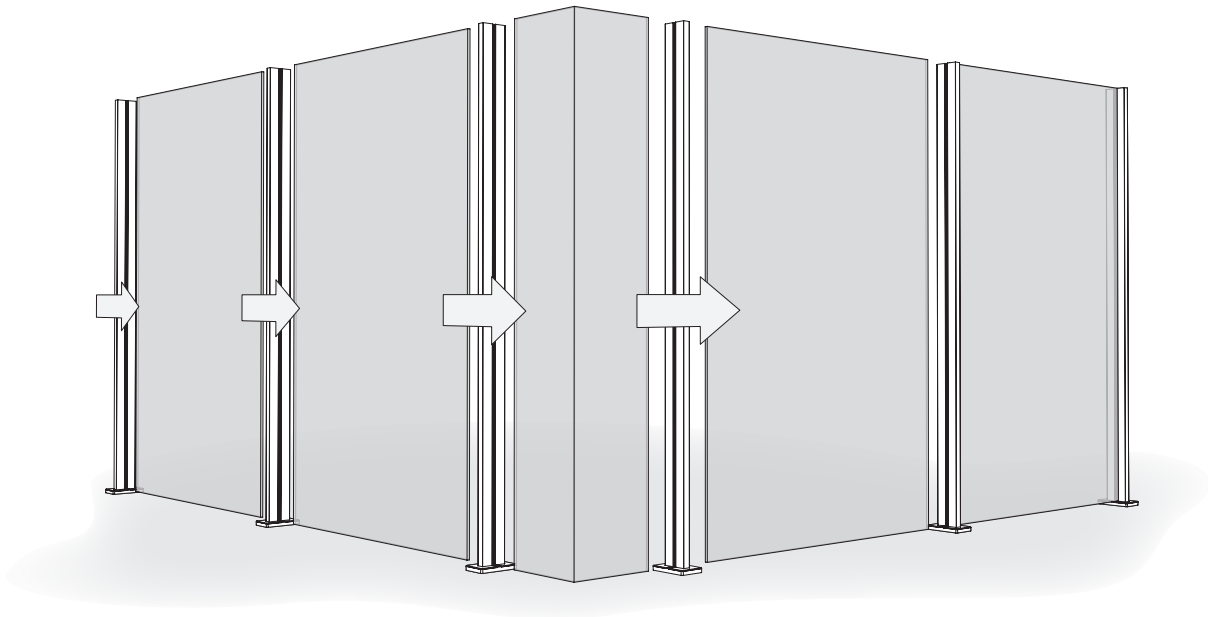



Installation

7 Assemble Top Rail

- a** Cut Glazing Channel (0-15-2369) to the length of the Top Rail (0-15-2103).

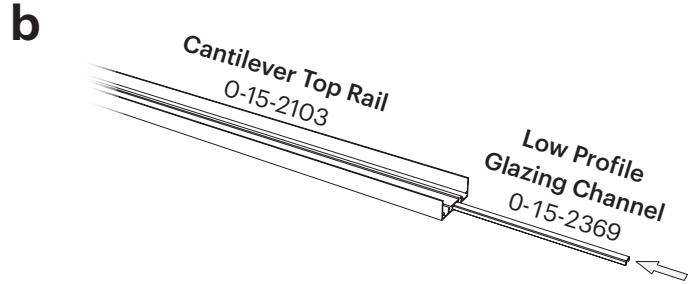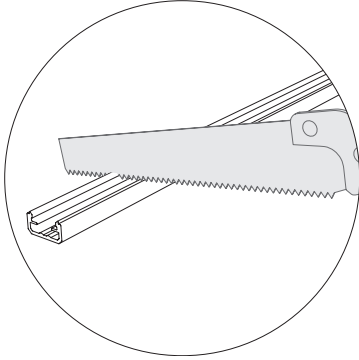


- c** Assemble Cantilevered Top Rail Mitered Corner KIT (3-15-2118-K) as shown below.

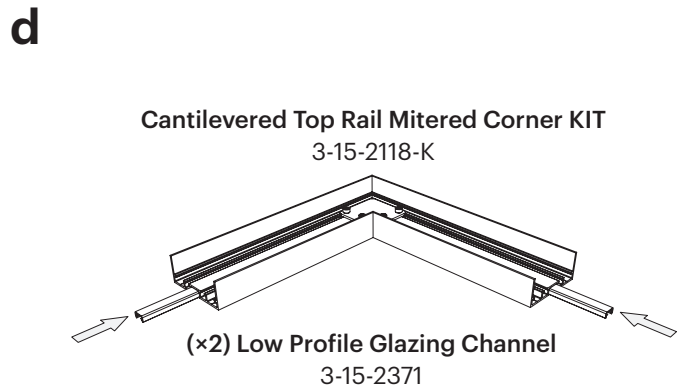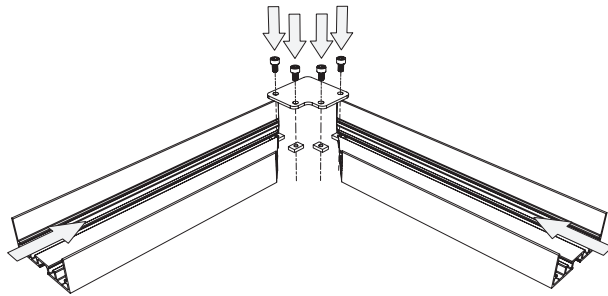

Installation

8 Connect Top Rail to Vertical Posts

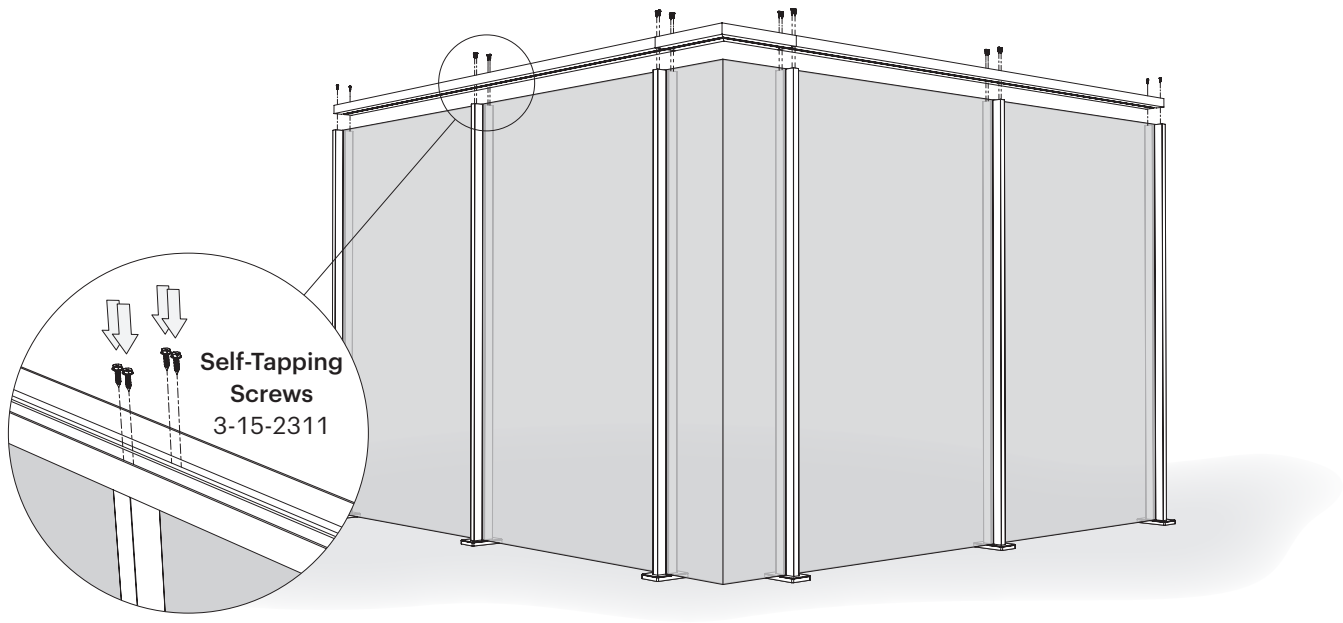

9 Attach End Caps (×2)

